

AVTEX Compatible Camping Satellite System Quick Start Guide

Congratulations on your new purchase and welcome to the world of "EASYFIND" Satellite TV, the simplest system to set up and operate.

This guide will take you through the simple process required to get you watching all your favourite channels as soon as possible.

Dish Set UP

1. Assemble the dish as per instructions enclosed with feed arm contents in the brown box.
 - For camping case system chose mounting method of choice
 - For tripod mounted systems open out Tripod and push on tripod head (do not tighten thumb screws at this stage)

2. Fix Dish to Tripod head using U clamp in feed arm box


3. Set dish elevation for your location

To do this loosen the wing nut on the dish bracket and slide up or down until the notch is set pointing at the correct angle. Try to be as accurate as possible.


Angle Markings

Wing Nut

Notch

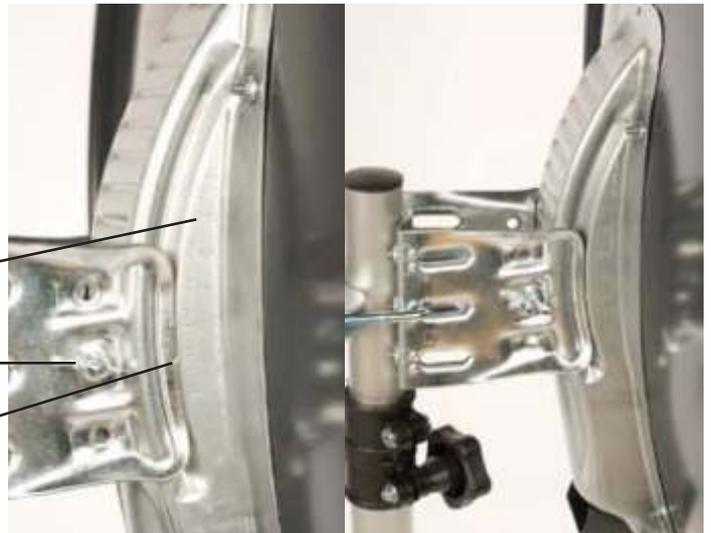

4. Skew LNB 15° anti-clockwise from behind the dish. To do this stand behind the dish so you are looking at the yellow end cap, now line up the third marking to the right of the centre triangle to 12 o'clock. Try to be as accurate as possible.

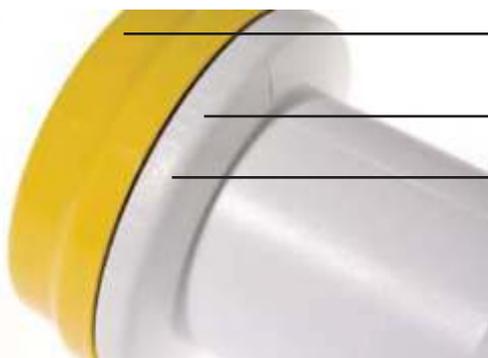

Yellow End Cap

Third Line to the right Marking


Center Triangle Marking

5. The dish face should be at roughly 90° to the ground and the cable from the LNB should be pointing to the ground. Use the compass and find a position for the dish with no trees or obstructions when the dish and LNB are pointing at 145° (SE)

6. Switch the Easy Find function on your AVTEX television on (see separate instructions) and now the LED in the housing on top of the LNB should be illuminated RED.



7. Now starting with the dish facing East move the dish slowly to the right at South east the LED should change colour. Make small movements with the dish left and right and the light should change from RED to AMBER, now all that is required is very small and slow movements of the dish to change the light to GREEN.

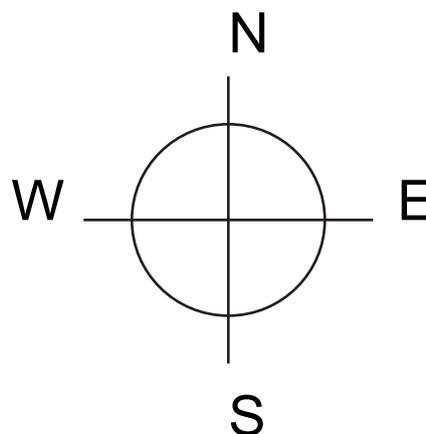

8. You should now be up and running. If not the main things to check are:

1. Check that the LNB Skew is correct
2. Check that the elevation is correct
3. Check all of the connections are solid
4. Check that there is nothing inbetween the LNB and the sky, a good way to do this is to look along the top of the LNB like it is a sight
5. Check that the display (i.e TV screen) is set to the appropriate input channel