

Mains Hook Up/Inverter Dual Supply

We recommend that this work is carried out by a qualified electrician

Original single supply wiring


Hook up socket connected to consumer unit



New dual supply wiring


1

Disconnect hook up socket from consumer unit and connect to new 3 pin mains socket marked hook up

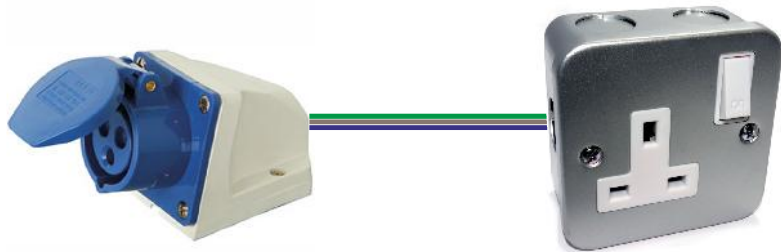

2

Connect inverter output to new 3 pin mains socket marked inverter

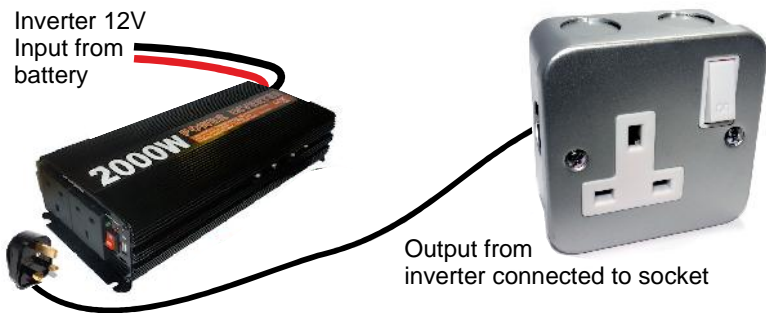

3

Replace input to consumer unit with 3 Pin mains plug



Plug the mains plug into the socket marked hook up to use your mains hook up supply or plug into the socket marked inverter to use the inverter power supply