



RANGE MASTER

USER MANUAL



LONG RANGE WIFI

www.rangemasterwifi.co.uk

About RangeMaster

Congratulations on your new purchase and welcome to the world of RangeMaster long range WiFi.

This guide will take you through the simple process required to get you online as soon as possible.

The RangeMaster long range WiFi products are ideal for motorhomes, caravans and boats where you need your Wireless network to reach that little bit further.

Share your boosted WiFi connection with multiple devices including iPads, iPhone and Android tablets and phone, in fact any device with WiFi.

For more information on RangeMaster and our products please visit our website: **www.rangemasterwifi.co.uk**

Get in touch

RangeMaster c/o Falcon Technical Limited
Hill Farm, Northwich Road
Dutton
Cheshire
WA4 4LE
United Kingdom

UK Enquiries: 01928 759 239
International: +44 (0) 1928 759 239
Email: contact@rangemasterwifi.co.uk

Package Contents:

Thank you for purchasing a RangeMaster long range WiFi Kit.

With your purchase you will find the following contents:



A RangeMaster Router



B Router Antenna



C 12V Power Lead



D Mains Adapter



E RangeMaster Antenna



F USB Antenna Cable



G Suction Mount



H User Instructions

RangeMaster Antenna and Router:

The RangeMaster Wifi Router Kit allows you to connect to a remote WiFi access point and share the connection with all your WiFi devices such as smartphones, tablets, laptop computers etc.

1. Assemble the suction mount and clips as shown below:



Remove the two nuts on the sucker



Use the nuts and bolts to attach the clips



Clip the antenna base into the clips


2. Screw the antenna to the base section and connect the USB cable from from the base to the router and mount the antenna on the side of your motorhome or caravan using the suction mount as shown on the right.

The higher you can get the antenna the better and try to position it so as much of the antenna as possible clears the roof of the vehicle.



Connect the power to the router using the included mains adapter or 12V lead (**Note:** Do NOT connect to a 24V outlet).

Connection diagram

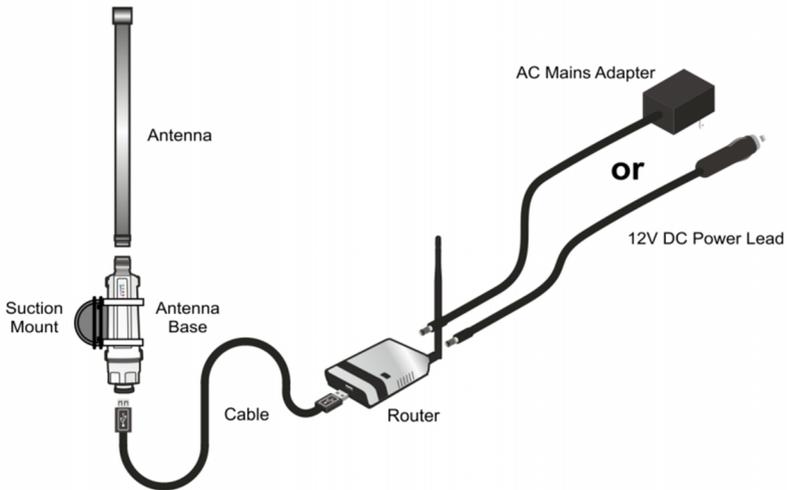


3. Open the Wi-Fi settings on your computer, phone or tablet and connect to the Wi-Fi network named **RANGEMASTER**

4. Once connected to the router open a web browser such as Safari, Chrome, Firefox or Internet Explorer and navigate to this web address: **192.168.2.1** (make sure you enter this is in the address bar at the top and NOT a search box).

You will be asked for a User name and Password, the default user name and password are both **admin**. The default user name and password can also be found on the sticker on the bottom of the router.

Note: There are issues with very old versions of the Android default browser (earlier than Android 4.0) if using one of these devices please install a different web browser such as Chrome or Firefox mobile to work around this issue.

5. You will now see the Status screen. Select the “**Setup**” button from the top menu:

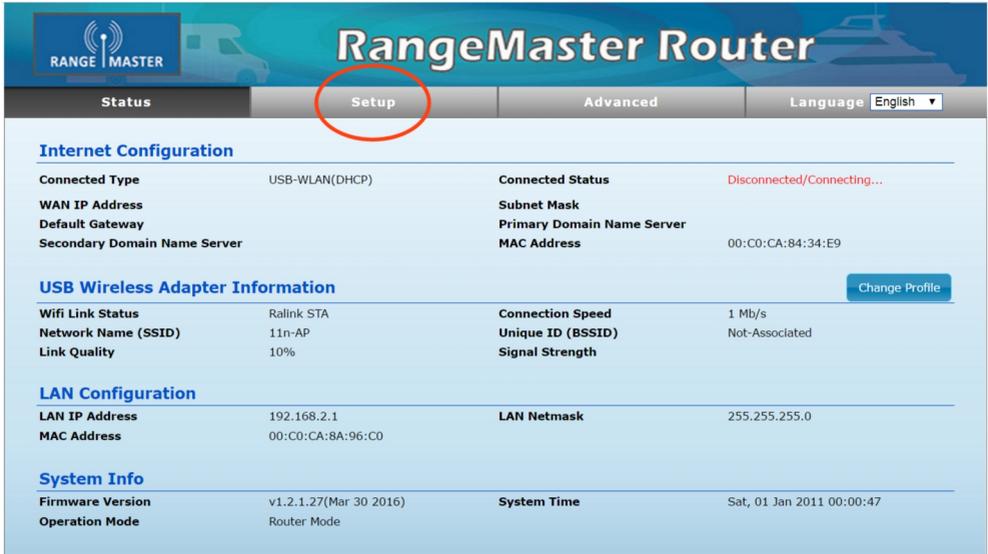

The screenshot shows the RangeMaster Router web interface. The top navigation bar includes 'Status', 'Setup', 'Advanced', and 'Language' (set to English). The 'Setup' button is circled in red. The main content area is divided into several sections:

- Internet Configuration**

Connected Type	USB-WLAN(DHCP)	Connected Status	Disconnected/Connecting...
WAN IP Address		Subnet Mask	
Default Gateway		Primary Domain Name Server	
Secondary Domain Name Server		MAC Address	00:C0:CA:84:34:E9
- USB Wireless Adapter Information**


Wifi Link Status	Ralink STA	Connection Speed	1 Mb/s
Network Name (SSID)	11n-AP	Unique ID (BSSID)	Not-Associated
Link Quality	10%	Signal Strength	

[Change Profile](#)
- LAN Configuration**

LAN IP Address	192.168.2.1	LAN Netmask	255.255.255.0
MAC Address	00:C0:CA:8A:96:C0		
- System Info**

Firmware Version	v1.2.1.27(Mar 30 2016)	System Time	Sat, 01 Jan 2011 00:00:47
Operation Mode	Router Mode		

6. On the next page select the blue “**Site Survey**” button:

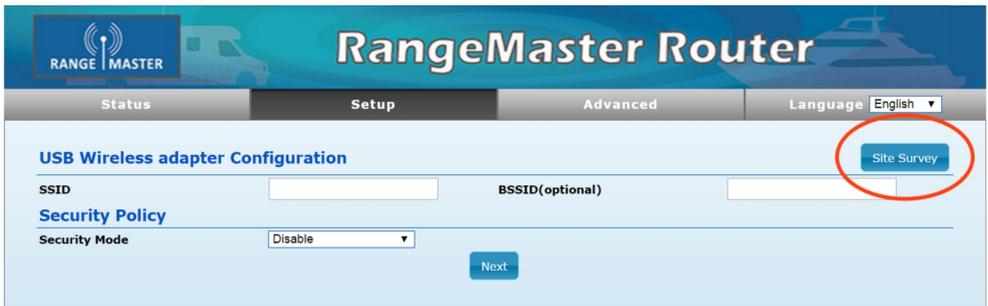

The screenshot shows the RangeMaster Router web interface in the 'Setup' tab. The top navigation bar includes 'Status', 'Setup', 'Advanced', and 'Language' (set to English). The 'Site Survey' button is circled in red. The main content area includes:

- USB Wireless adapter Configuration**


SSID	<input type="text"/>	BSSID(optional)	<input type="text"/>
------	----------------------	-----------------	----------------------
- Security Policy**

Security Mode	Disable
---------------	---------

[Next](#)

7. You will now see a list of available Wi-Fi networks, select the one you want to connect to by selecting the dot next to it then press the blue **“Select”** button on the bottom right.

Select the name of the network you want to connect to. Do not select RANGEMASTER here.

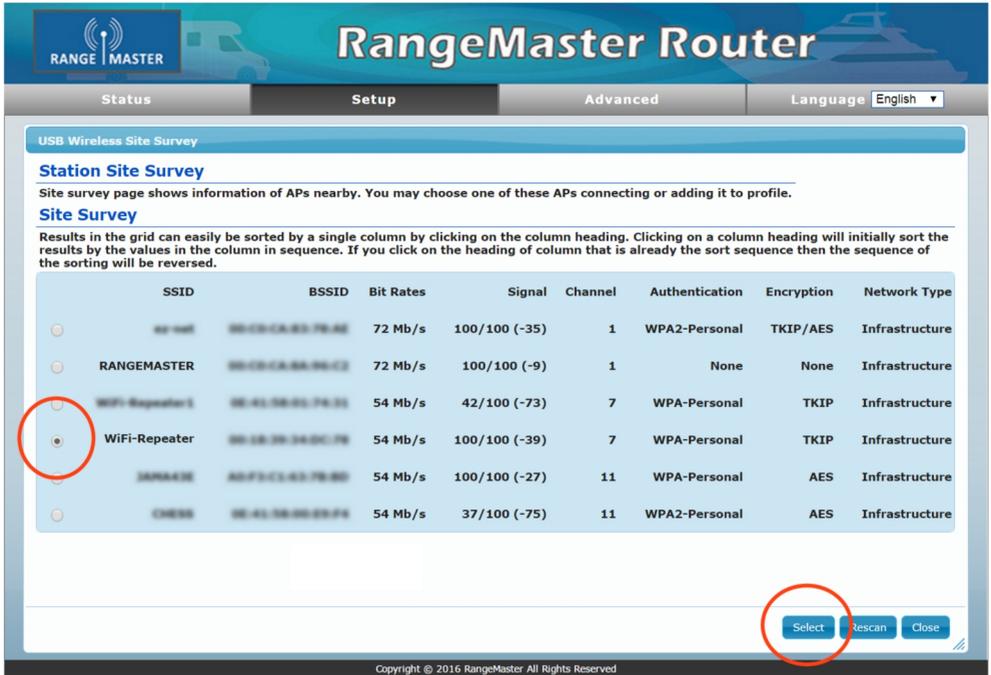

RangeMaster Router

Status Setup **Advanced** Language English

USB Wireless Site Survey

Station Site Survey

Site survey page shows information of APs nearby. You may choose one of these APs connecting or adding it to profile.

Site Survey

Results in the grid can easily be sorted by a single column by clicking on the column heading. Clicking on a column heading will initially sort the results by the values in the column in sequence. If you click on the heading of column that is already the sort sequence then the sequence of the sorting will be reversed.


	SSID	BSSID	Bit Rates	Signal	Channel	Authentication	Encryption	Network Type
<input type="radio"/>	air-net	9E:4E:3A:83:76:82	72 Mb/s	100/100 (-35)	1	WPA2-Personal	TKIP/AES	Infrastructure
<input type="radio"/>	RANGEMASTER	9E:4E:3A:8A:96:C2	72 Mb/s	100/100 (-9)	1	None	None	Infrastructure
<input type="radio"/>	WIFI-Repeater 1	9E:4E:3A:83:76:82	54 Mb/s	42/100 (-73)	7	WPA-Personal	TKIP	Infrastructure
<input checked="" type="radio"/>	WIFI-Repeater	9E:4E:3A:8A:96:C2	54 Mb/s	100/100 (-39)	7	WPA-Personal	TKIP	Infrastructure
<input type="radio"/>	JANAKI	40:75:C1:63:78:80	54 Mb/s	100/100 (-27)	11	WPA-Personal	AES	Infrastructure
<input type="radio"/>	CHES	9E:4E:3A:8A:96:C2	54 Mb/s	37/100 (-75)	11	WPA2-Personal	AES	Infrastructure

Select Rescan Close

Copyright © 2016 RangeMaster All Rights Reserved

8. On the next page enter the password for the Wi-Fi network you want to connect to in the **“Pass Phrase”** box and then select the blue **“Next”** button at the bottom.

NOTE: For most caravan site hotspots, Airangel and public hotspots such as The Cloud, BT Openzone, Sky WiFi and O2 WiFi you do not enter a password here, just select **“Next”**

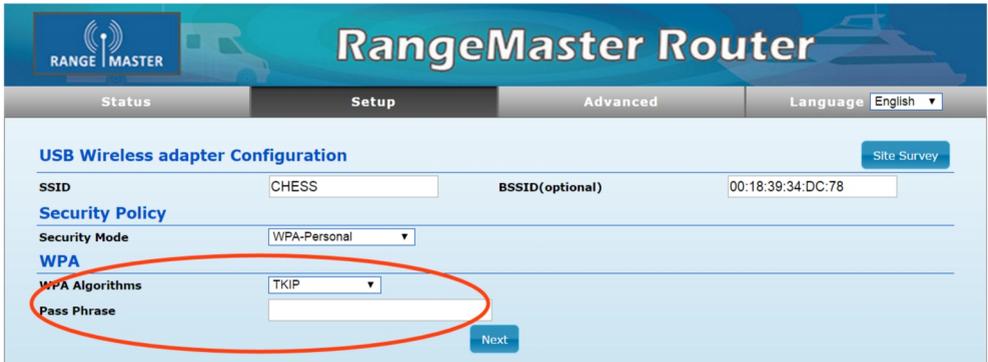

RangeMaster Router

Status Setup Advanced Language English

USB Wireless adapter Configuration [Site Survey](#)

SSID: CHESB BSSID(optional): 00:18:39:34:DC:78

Security Policy

Security Mode: WPA-Personal

WPA

WPA Algorithms: TKIP

Pass Phrase:

[Next](#)

9. On the next page you can add security to your router to prevent anyone else from using your connection (if you don't want to do this just click the blue **"Next"** button).

To add security change Security Mode to WPA2-PSK, select AUTO for WPA-Algorithm and enter the password you want to use to connect to the router in the Pass Phrase box. Click **"Done"** when you are finished.



RangeMaster Router

Status Setup Advanced Language English

Wireless Security and Encryption Settings

The Wireless Security and Encryption Settings page allows you to make detailed security configurations to prevent unauthorized access and monitoring.

Select "RANGEMASTER"

SSID Choice: RANGEMASTER Security Mode: WPA2-PSK

WPA

WPA Algorithms: TKIP AES AUTO (TKIP/AES)

Pass Phrase: 8~63 ASCII or 64 Hexadecimal


Key Renewal Interval: 3600 seconds

[Previous](#) [Done](#)

10. Now the router will restart and connect to the chosen WiFi network. If it sticks on the rebooting page check that your device is still connected to the RANGEMASTER network, if not then reconnect and enter 192.168.2.1 in your browser again.



11. On the status screen you should now see the “**Connected Status**” shows Connected:

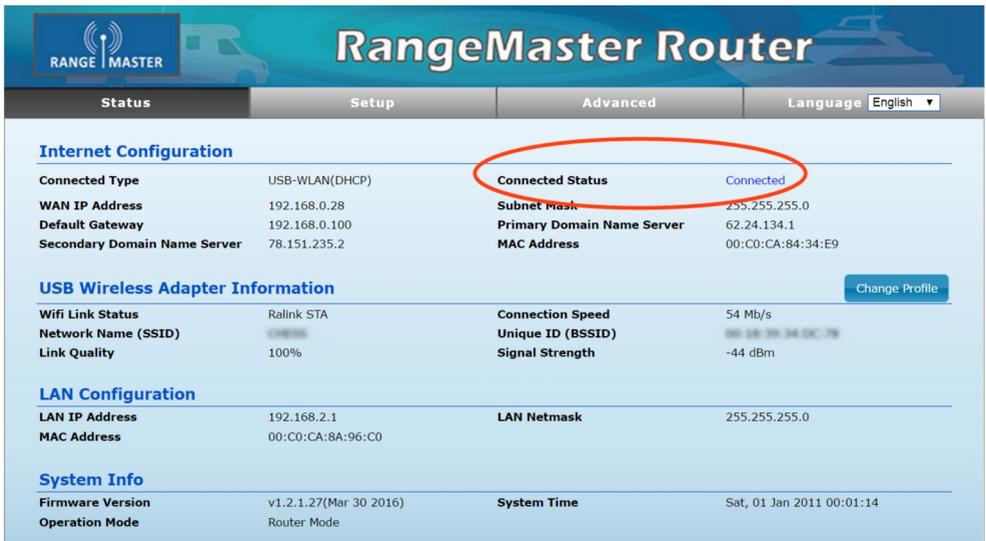

12. Browse to a web page to check that your connection is working.

NOTE: For most caravan site hotspots, Airangel and public hotspots such as The Cloud, BT Openzone, Sky WiFi and O2 WiFi you will now be asked for your username and password when you first try to visit a web page.

Enjoy your new long range WiFi connection!

If you are having any problems check the troubleshooting section below and if you are still struggling give us a call on 01928 759 239 week days from 10am to 3pm and we'll be glad to help.

Troubleshooting

Q: It times out when I enter 192.168.2.1 in my browser.

A: Make sure you are entering it in the address bar at the top of the browser not a search box and double check that your device is connected to the RANGEMASTER WiFi network.

Q: After saving settings I get stuck on “Saving ... Please wait a moment”, “Rebooting...” or it times out.

A: This happens because the router restarts after the settings are saved and in the brief interval that its WiFi network isn't visible your computer/tablet etc. may reconnect to another available WiFi network that you have used before.

If this happens just verify that you are still connected to the RangeMaster WiFi network and then go to 192.168.2.1 again to check your connection.

Q: My caravan site or WiFi operator has given me a user name and password, where do I enter this?

A: For this type of network make sure you do not enter a password in step 7. When you get to the end of the process and try to access a web page the caravan sites network should ask you for the login details they gave you. This is the case for most caravan site networks, Airangel and public hotspots such as The Cloud, BT Openzone, Sky WiFi and O2 WiFi Openzone, Sky WiFi and O2 WiFi.

Q: I have set up security and have forgotten my password.

A: The only way round this is to reset the router to factory settings. To do this power the router on and then press and hold the reset button* on the bottom of the router for 5 seconds and release, then wait for the router to restart.

*The reset button is the small red button recessed in a hole on the bottom of the router.

WARRANTY DISCLAIMER

RangMaster WiFi is a trademark of Falcon Technical Ltd. All technology and techniques used to build and deliver our products are intellectual property of the above named company or its associated partners. It is against copyright laws to attempt to extract, reverse engineer, copy or manipulate the patent registered technology included with our products and any party who may breach these conditions set herewith will be subjected to legal action to the full extent of the law in his or hers jurisdiction.

All RangeMaster WiFi products are covered by a 1 year warranty against any hardware defects (ONLY). Any damages or accidental breakages to have been caused by user during installation or at any other time will not be covered under the terms of this agreement.

The contents of this publication are believed to be correct at the time of going to press however any information, Details, products or services may be supplemented, modified or withdrawn without notice.

Another innovative product from Falcon Technical Ltd.
Hill Farm, Northwich Road, Dutton, Cheshire, WA4 4LE

End of Life Disposal

Information on Disposal for Users (private households)



1. In the European Union. If you want to dispose of this equipment, please do not use the ordinary dustbin! Used electrical equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment. Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge. In some countries your local retailer may also take back your old product free of charge if you purchase a similar new one. Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators please dispose of these separately beforehand according to local requirements. By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In other Countries outside the EU. If you wish to discard this product please contact your local authorities and ask for the correct method of disposal. For Switzerland used electrical or electronic equipment can be returned free of charge to the Dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch

Information on Disposal for Business Users

1. In the European Union If the product is for business users and you want to discard it: Please contact your QuickSAT dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) may be taken back by your local collection facilities.

2. In other Countries outside the EU If you wish to discard this product please contact your local authorities and ask for the correct method of disposal.