




RANGE | MASTER

USER MANUAL



www.rangemasterwifi.co.uk



About RangeMaster

Congratulations on your new purchase and welcome to the world of RangeMaster long range WiFi.

This guide will take you through the simple process required to get you online as soon as possible.

The RangeMaster long range WiFi products are ideal for motorhomes, caravans and boats where you need your Wireless network to reach that little bit further.

With plug in options for your laptop or desktop computer or use our RangeMaster router to allow you to share you boosted WiFi connection with multiple devices including iPads, iPhone and Android tablets and phone, in fact any device with WiFi.

Please note that it is important to retain your receipt or proof of purchase so that we are able to assist and deal with any enquiries you may have.

RangeMaster is a product and brand name of Falcon Technical Ltd.

For more information on RangeMaster and our products please visit our website: www.rangemasterwifi.co.uk

Get in touch

RangeMaster c/o Falcon Technical
Limited Hill Farm, Northwich Road
Dutton
Cheshire
WA4 4LE
United Kingdom

UK Enquiries: 01928 759 239
International: +44 (0) 1928 759 239
Email: contact@rangemasterwifi.co.uk

Package Contents:

Thank you for purchasing a RangeMaster long range WiFi Kit.

With your purchase you will find the following contents:



A RangeMaster Router



B Router Antenna



C Network Cable



D Mains Adapter



E 12V Power Lead



F WiFi King USB Antenna



G USB Antenna Cable



H Suction Mount



I User Instructions

WiFi King Antenna and Router:

The RangeMaster Wifi Router Kit allows you to connect to a remote WiFi access point and share the connection with all your WiFi devices such as smartphones, tablets, laptop computers etc.

1. Screw the antenna to the base section and connect the USB cable from from the base to the router and mount the antenna on the side of your motorhome or caravan using the included suction mount as shown on the right.



The higher you can get the antenna the better and try to position it so as much of the antenna as possible clears the roof of the vehicle.

Connect the power to the router using the included mains adapter or 12V lead.


2. Go to the Wi-Fi settings on your computer, phone or tablet and connect to the Wi-Fi network named **RANGEMASTER** or **11N 3G ROUTER_AP**

3. Once connected to the router open a web browser such as Safari, Chrome, Firefox or Internet Explorer and navigate to this web address: **192.168.2.1** (make sure you enter this is in the address bar and NOT a search box).

You will be asked for a User name and Password, the default user name and password are both **admin**. The default user name and password can also be found on the bottom of the router.


Note: There are issues with very old versions of Androids default browser (earlier than Android 4.0) if using one of these devices please install a different web browser such as Chrome or Firefox mobile to work around this issue.

4. You will now see the Status screen. Select the **“Easy Setup”** button from the top menu:

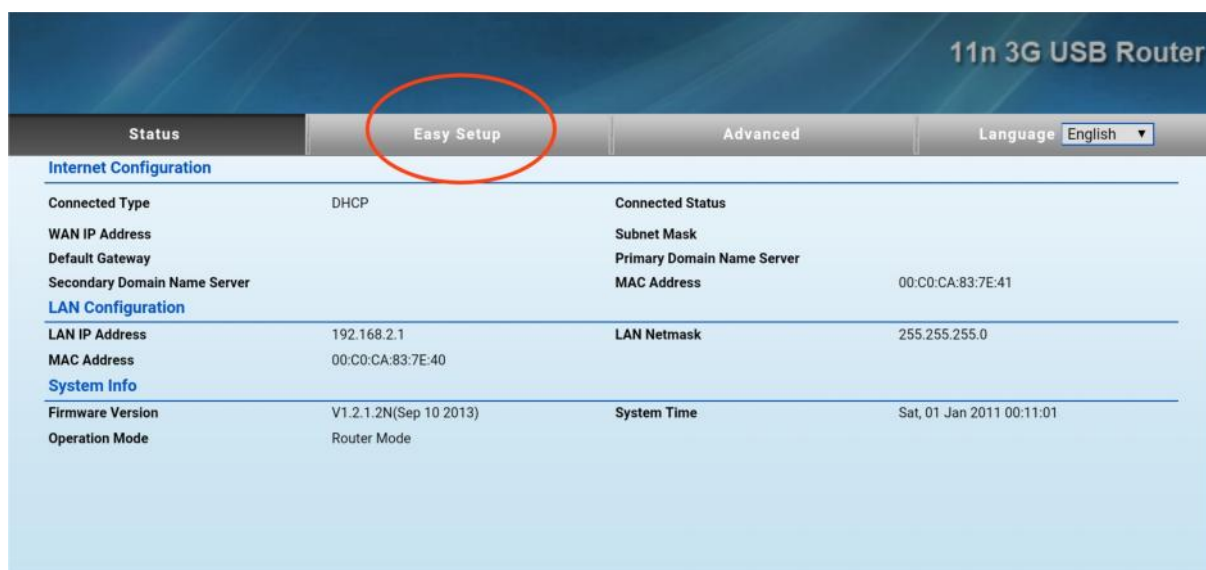

11n 3G USB Router			
Status	Easy Setup	Advanced	Language English
Internet Configuration			
Connected Type	DHCP	Connected Status	
WAN IP Address		Subnet Mask	
Default Gateway		Primary Domain Name Server	
Secondary Domain Name Server		MAC Address	00:C0:CA:83:7E:41
LAN Configuration			
LAN IP Address	192.168.2.1	LAN Netmask	255.255.255.0
MAC Address	00:C0:CA:83:7E:40		
System Info			
Firmware Version	V1.2.1.2N(Sep 10 2013)	System Time	Sat, 01 Jan 2011 00:11:01
Operation Mode	Router Mode		

5. On the next page select “USB Wireless adapter”:

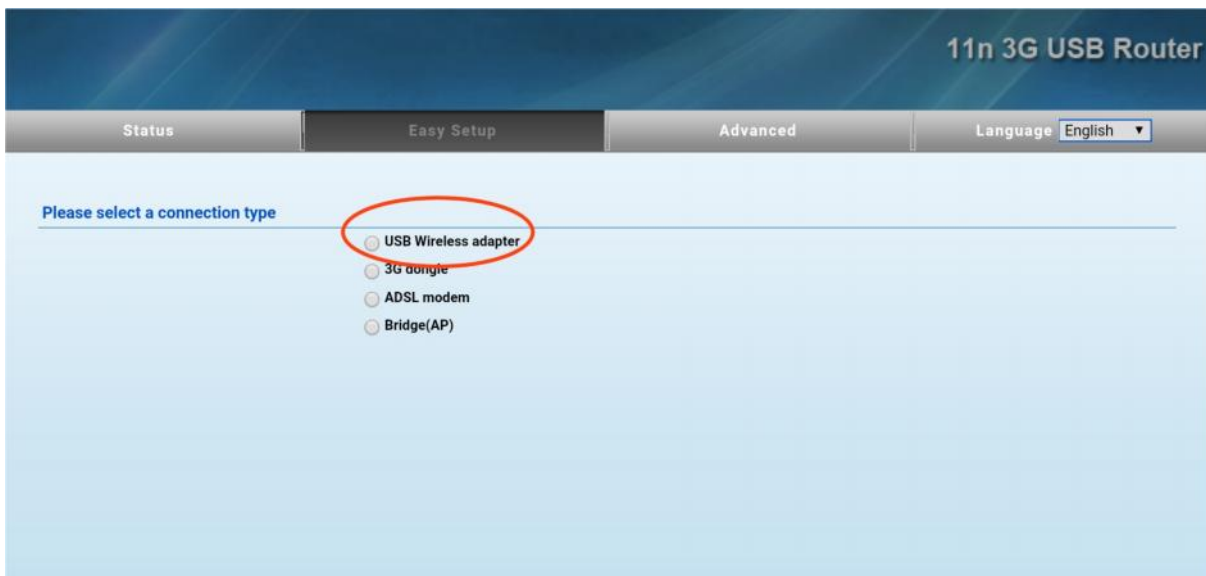


11n 3G USB Router

Status Easy Setup Advanced Language English

Please select a connection type

- USB Wireless adapter
- 3G dongle
- ADSL modem
- Bridge(AP)

6. On the next page select the blue “Site Survey” button:

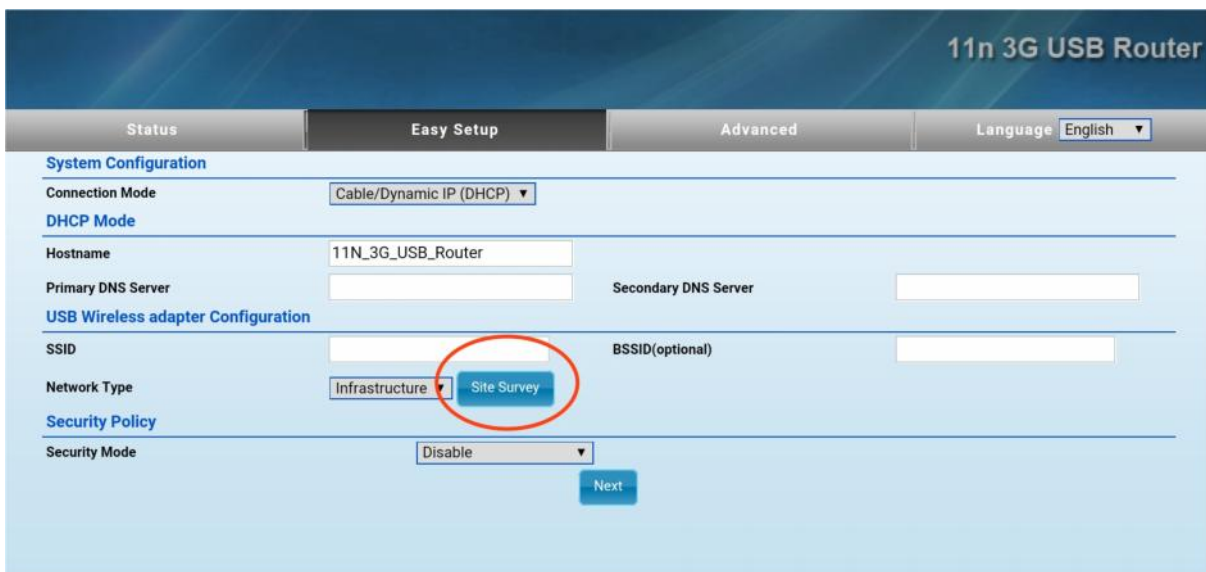

11n 3G USB Router

Status Easy Setup Advanced Language English

System Configuration

Connection Mode Cable/Dynamic IP (DHCP)

DHCP Mode

Hostname 11N_3G_USB_Router

Primary DNS Server Secondary DNS Server

USB Wireless adapter Configuration

SSID BSSID(optional)

Network Type Infrastructure **Site Survey**


Security Policy

Security Mode Disable

Next

7. You will now see a list of available Wi-Fi networks, select the one you want to connect to by selecting the dot next to it then press the blue “**Select**” button on the bottom right.

Select the name of the network you want to connect to. **Do not select RANGEMASTER.**

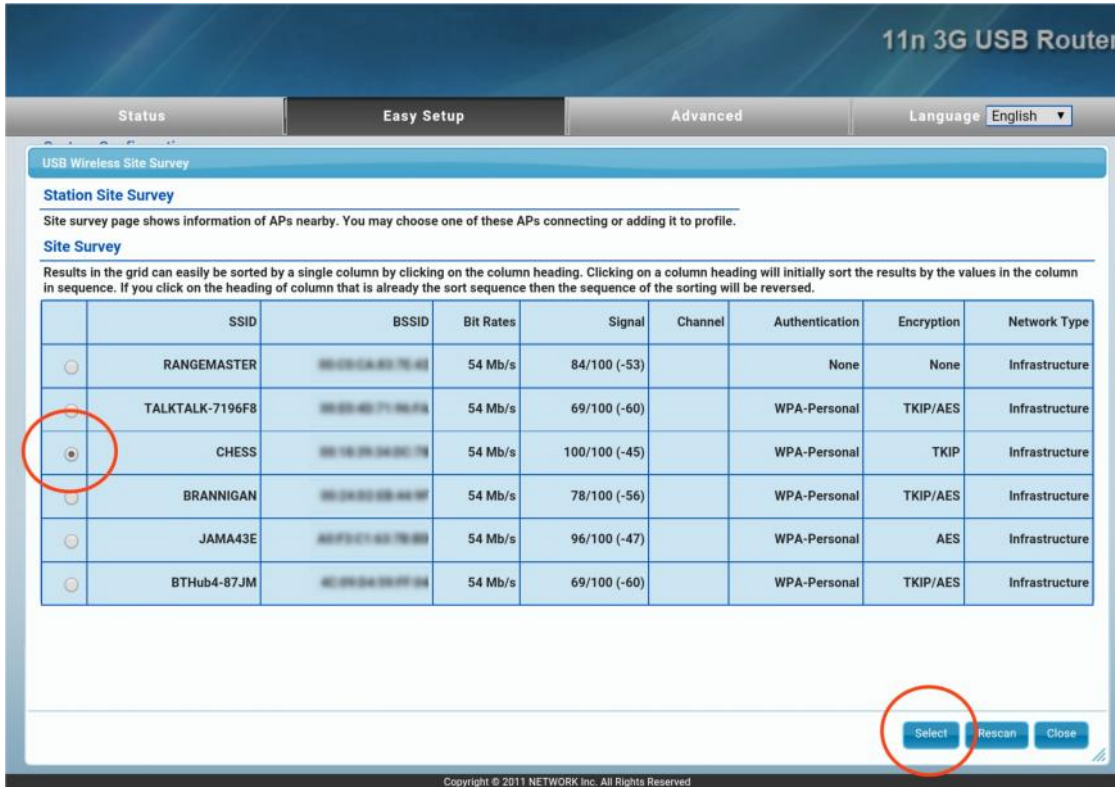

11n 3G USB Router

Status Easy Setup Advanced Language English

USB Wireless Site Survey

Station Site Survey

Site survey page shows information of APs nearby. You may choose one of these APs connecting or adding it to profile.

Site Survey

Results in the grid can easily be sorted by a single column by clicking on the column heading. Clicking on a column heading will initially sort the results by the values in the column in sequence. If you click on the heading of column that is already the sort sequence then the sequence of the sorting will be reversed.


	SSID	BSSID	Bit Rates	Signal	Channel	Authentication	Encryption	Network Type
<input type="radio"/>	RANGEMASTER	88:23:28:83:76:48	54 Mb/s	84/100 (-53)		None	None	Infrastructure
<input type="radio"/>	TALKTALK-7196F8	88:23:28:71:96:F8	54 Mb/s	69/100 (-60)		WPA-Personal	TKIP/AES	Infrastructure
<input checked="" type="radio"/>	CHESS	88:23:28:34:3C:76	54 Mb/s	100/100 (-45)		WPA-Personal	TKIP	Infrastructure
<input type="radio"/>	BRANNIGAN	88:23:28:38:44:87	54 Mb/s	78/100 (-56)		WPA-Personal	TKIP/AES	Infrastructure
<input type="radio"/>	JAMA43E	88:23:28:43:43:88	54 Mb/s	96/100 (-47)		WPA-Personal	AES	Infrastructure
<input type="radio"/>	BTHub4-87JM	88:23:28:87:87:88	54 Mb/s	69/100 (-60)		WPA-Personal	TKIP/AES	Infrastructure

Select Rescan Close

Copyright © 2011 NETWORK Inc. All Rights Reserved

8. On the next page enter the password for the Wi-Fi network you want to connect to in the “**Pass Phrase**” box and then select the blue “**Next**” button at the bottom.

NOTE: For most caravan site hotspots, Airangel and public hotspots such as The Cloud, BT Openzone, Sky WiFi and O2 WiFi you do not enter a password here, just select “**Next**”

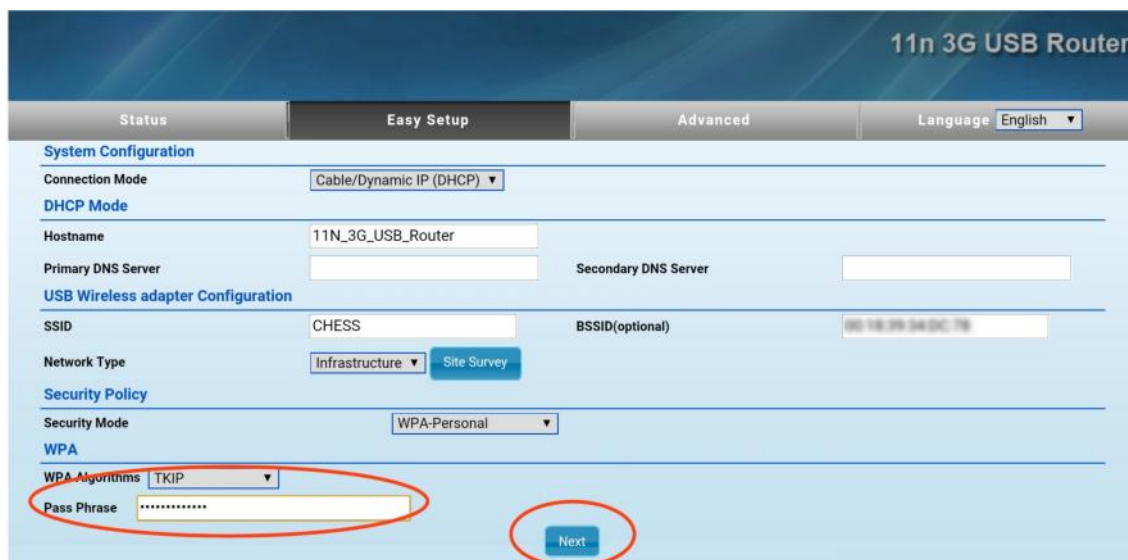

11n 3G USB Router

Status Easy Setup Advanced Language English

System Configuration

Connection Mode Cable/Dynamic IP (DHCP)

DHCP Mode

Hostname 11N_3G_USB_Router

Primary DNS Server Secondary DNS Server

USB Wireless adapter Configuration

SSID CHESS BSSID(optional) 88:23:28:34:3C:76

Network Type Infrastructure Site Survey

Security Policy

Security Mode WPA-Personal


WPA

WPA Algorithms TKIP

Pass Phrase

Next

9. On the next page select the blue “Done” button.

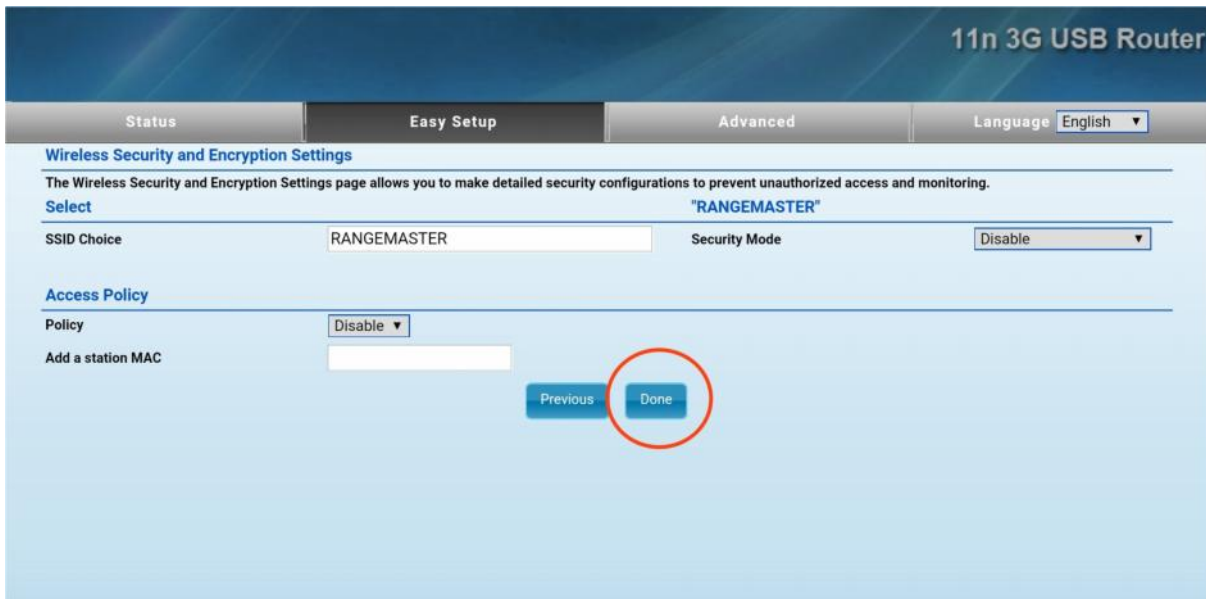

10. Select the “Status” button on the top menu and you should now see the “Connected Status” shows Connected:



11. Browse to a web page to check that your connection is working.

NOTE: For most caravan site hotspots, Airangel and public hotspots such as The Cloud, BT Openzone, Sky WiFi and O2 WiFi you will now be asked for your username and password when you first try to visit a web page.

Enjoy your new long range WiFi connection!

Adding Security

It is easy to add a password to the RangeMaster router so that only you can access it.

1. Log into your RangeMaster router web interface at 192.168.2.1 as normal. The default user name and password are both **admin**.
2. On the top menu select Advanced and then Security (under Wireless settings).
3. In the drop down menu for "Security mode" select WPA2-PSK
4. Enter the password you want to use in the "Pass Phrase" box and click the blue **Apply** button. You don't need to put anything in the Access Policy section.



The screenshot shows the 'Wireless Security and Encryption Settings' page in the RangeMaster router's web interface. The 'Advanced' tab is active. The 'Security Mode' dropdown menu is set to 'WPA2-PSK', indicated by a red arrow. The 'Pass Phrase' text input field is empty, also indicated by a red arrow. Below the 'Pass Phrase' field, it specifies '8~63 ASCII or 64 Hexadecimal'. Other visible settings include 'SSID Choice' set to 'RANGEMASTER', 'WPA Algorithms' with 'Auto(TKIP/AES)' selected, 'Key Renewal Interval' set to '3600 seconds', and 'Policy' set to 'Disable'. At the bottom of the form are 'Apply' and 'Cancel' buttons.

5. After the router restarts you will need to reconnect to the RangeMaster WiFi using the new password you just entered.

Troubleshooting

It times out when I enter 192.168.2.1 in my browser.

Make sure you are entering it in the address bar at the top of the browser not a search box.

After saving settings I get stuck on “Saving ... Please wait a moment” or it times out.

This happens because the router restarts after the settings are saved and in the brief interval that its WiFi network isn't visible your computer/tablet etc. may reconnect to another available WiFi network that you have used before.

If this happens just verify that you are still connected to the RangeMaster WiFi network and then go to 192.168.2.1 again to check your connection.

My caravan site or WiFi operator has given me a user name and password, where do I enter this?

For this type of network make sure you do not enter a password in step 8. When you get to the end of the process and try to access a web page the caravan sites network should ask you for the login details they gave you. This is the case for most caravan site networks, Airangel and public hotspots such as The Cloud, BT Openzone, Sky WiFi and O2 WiFi Openzone, Sky WiFi and O2 WiFi.

I have set up security and have forgotten my password.

The only way round this is to reset the router to factory settings. To do this press and hold the reset button on the bottom of the router for 5 seconds and release, then wait for the router to restart. The reset button is the small red button recessed in a hole on the bottom of the router.

End of Life Disposal

A. Information on Disposal for Users (private households)



1. In the European Union

Attention **if** you want to dispose of this equipment, please do not use the ordinary dustbin! Used electrical equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment. Following the implementation by member states, private households within the EU states may return their used electrical and electronic equipment to designated collection facilities free of charge. **In** some countries your local retailer may also take back your old product free of charge if you purchase a similar new one. Please contact your local authority for further details. If your used electrical or electronic equipment has batteries or accumulators please dispose of these separately beforehand according to local requirements. By disposing of this product correctly you will help ensure that the waste undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health which could otherwise arise due to inappropriate waste handling.

2. In other Countries outside the EU

If you wish to discard this product please contact your local authorities and ask for the correct method of disposal. For Switzerland used electrical or electronic equipment can be returned free of charge to the Dealer, even if you don't purchase a new product. Further collection facilities are listed on the homepage of www.swico.ch

B. Information on Disposal for Business Users

1. In the European Union If the product is for business users and you want to discard it: Please contact your QuickSAT dealer who will inform you about the take-back of the product. You might be charged for the costs arising from take-back and recycling. Small products (and small amounts) may be taken back by your local collection facilities.

2. In other Countries outside the EU If you wish to discard this product please contact your local authorities and ask for the correct method of disposal.



The batteries supplied with this product contains traces of lead.

For EU: The crossed out wheelie bin implies that used batteries should not be put in the general household waste! There is a separate collection system for used batteries to allow proper treatment and recycling in accordance with legislation. Please contact your local authority for details on the collection and recycling schemes.

For other non-EU countries. Please contact your local authority for correct method of disposal of the used battery.

WARRANTY DISCLAIMER

RangsMaster WiFi is a trademark of Falcon Technical Ltd. All technology and techniques used to build and deliver our products are intellectual property of the above named company or its associated partners. It is against copyright laws to attempt to extract, reverse engineer, copy or manipulate the patent registered technology included with our products and any party who may breach these conditions set herewith will be subjected to legal action to the full extent of the law in his or hers jurisdiction.

All RangeMaster WiFi products are covered by a 1 year warranty against any hardware defects (ONLY). Any damages or accidental breakages to have been caused by user during installation or at any other time will not be covered under the terms of this agreement.

The contents of this publication are believed to be correct at the time of going to press however any information, Details, products or services may be supplemented, modified or withdrawn without notice.