



## Falcon Navigator with Camera Camera Operation Instructions

Your Falcon Navigator FN-5GPSC or FN-7GPSC has a built in camera for recording the road ahead.

To use the camera to take still pictures or videos select the "**Track record**" icon on the main menu.

Press the button with two arrows to switch between still mode and video mode



The icon on the top left of the picture will show a movie camera or a still camera to indicate which mode it is in.




Video Mode



Still Mode

### Still mode:

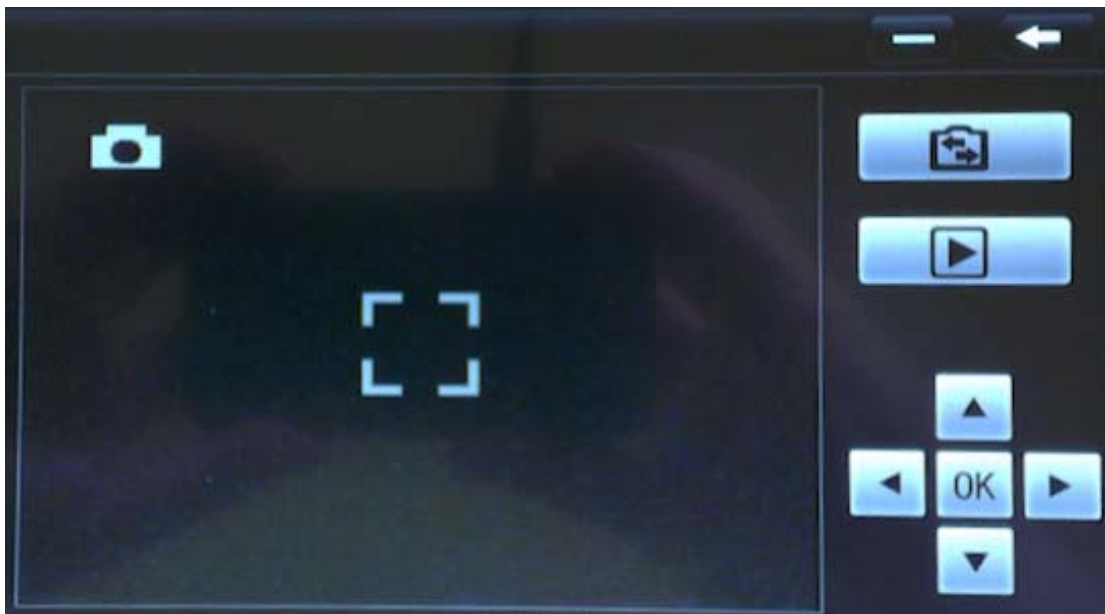


**Take a picture:** To take a picture press OK, the video window will go blank for a moment and then return to show the camera view, the unit is now ready to take another picture.

**Zoom:** Pressing the up and down arrows will zoom the picture in or out respectively.

**Full Screen View:** Touching the picture at any time will make it go full screen, touch it again to return to the window mode.

## Video mode:

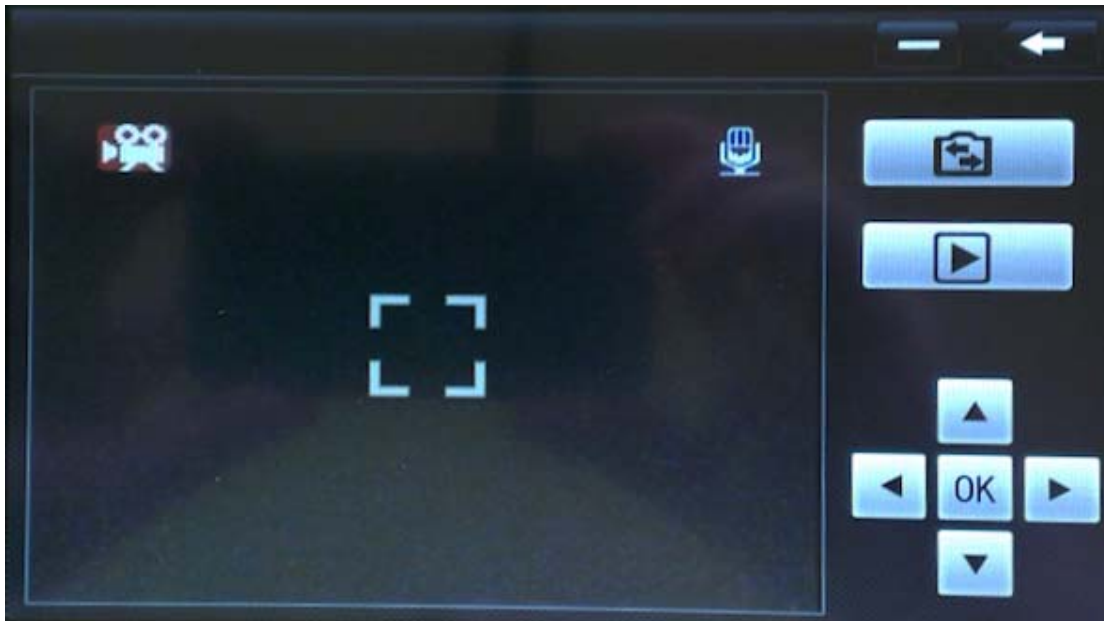

**Start Recording:** To start recording a video press OK. The time and date will be displayed in the bottom right of the picture and the elapsed recording time will appear in bottom left.

**Zoom:** Pressing the up and down arrows will zoom the picture in or out respectively.

**Full Screen View:** Touching the picture at any time will make it go full screen, touch it again to return to the window mode

**Stop Recording:** To stop recording a video press OK.

**Exiting the camera application:** If you wish to return to another function such as navigation while leaving the camera recording press the minimize button second from the right at the very top of the screen:



To exit the camera application and stop recording press the back button:



## Playback:

To view saved pictures or watch recorded videos press the play button:



Use the left and right arrows to move through the saved pictures and video recordings.



**Start a video:** To start playback of a video press OK

**Pause:** To pause playback of a video press OK

**Stop:** To stop playback of a video press the down button twice

**Fast forward:** To fast forward a video press the up arrow to select 1X, 2X, 4X, 8X normal speed

**Full Screen View:** Touching the picture at any time will make it go full screen, touch it again to return to the window mode

To switch back to live mode to take more pictures or videos press the button with two arrows.

