
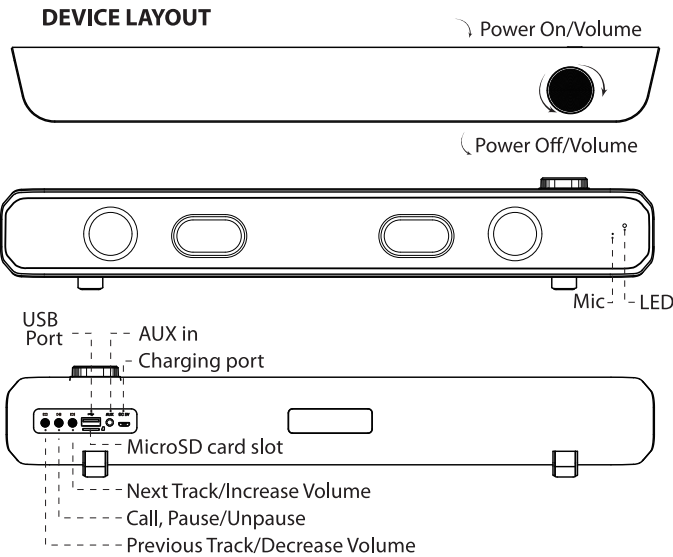


<div data-bbox="325 287 989 596"></div> <div data-bbox="418 633 890 682"><h1>Bluetooth Soundbar</h1></div> <div data-bbox="608 729 701 757"><p>FN-SB03</p></div>	<div data-bbox="1094 265 1218 283"><p>Dear Customer</p></div> <div data-bbox="1094 309 1668 371"><p>Thank you for choosing the Falcon Bluetooth soundbar. Please read these instructions to familiarise yourself with the functions and to get the best performance from the soundbar.</p></div> <div data-bbox="1094 394 1719 434"><p>If you have any questions please email us at support@falcontechonology.co.uk or call us on 01928 759 239.</p></div> <div data-bbox="1094 458 1283 476"><p>SAFETY PRECAUTIONS</p></div> <div data-bbox="1094 502 1739 757"><ul style="list-style-type: none">• Please store and use this device in a normal temperature environment.• Do not expose the device to water or a humid environment and do not drop it.• Do not try to disassemble, repair, or modify the device.• This device contains a built-in lithium battery, do not dispose of it carelessly or put it in a fire.• In order to prolong the life of the battery and to avoid damaging your hearing do not listen to music at an excessive volume for a long time .• Unplug the USB cable if the device malfunctions to prevent damage to the unit or other components.• Charge the device when the battery is low, a low battery can influence the performance of the Bluetooth function or connection.</div>	<div data-bbox="1832 251 2502 808"><p>DEVICE LAYOUT</p><p>Top view: Power On/Volume (clockwise arrow), Power Off/Volume (anti-clockwise arrow).</p><p>Front view: USB Port, AUX in, Charging port, Mic, LED.</p><p>Bottom view: MicroSD card slot, Next Track/Increase Volume, Call, Pause/Unpause, Previous Track/Decrease Volume.</p></div>
---	--	---

<div data-bbox="336 1024 483 1042"><p>KEY DEFINITION</p></div> <div data-bbox="336 1046 936 1110"><p>1 : Power switch and volume knob. ↻ Turn clockwise to turn on the device and increase the volume. ↺ Turn anti-clockwise to decrease the volume and turn anti-clockwise to the end to turn off the device.</p></div> <div data-bbox="336 1133 981 1239"><p>2: ▶⏸ Play/pause and phone call button. In BT/SD/USB mode: short press for play/pause during music playback. In Bluetooth mode when paired with a phone short press this button to answer the phone when it gets an incoming call and short press again to hang up, short press twice to redial the last phone number the phone dialed.</p></div> <div data-bbox="336 1263 712 1303"><p>3: ◀◀ Previous track/decrease volume. BT/SD/USB mode: short press for previous track.</p></div> <div data-bbox="336 1326 681 1366"><p>4: ▶▶ Next track/increase volume. BT/SD/USB mode: short press for next track.</p></div> <div data-bbox="336 1390 893 1430"><p>5: LED indicator: Blue led for on, red for charging and will turn off when battery has been fully charged.</p></div> <div data-bbox="336 1454 848 1476"><p>6: MicroUSB port: for connecting the power adaptor for charging.</p></div> <div data-bbox="336 1499 574 1517"><p>BLUETOOTH CONNECTION</p></div> <div data-bbox="336 1521 964 1561"><p>When the device is on and in Bluetooth mode, the device will prompt 'Bluetooth mode' and the LED indicator will blink blue to indicate device is ready for</p></div>	<p>paring. On your TV, phone or tablet search for new device and click the paring ID "Falcon Soundbar" to pair. The device will prompt "Bluetooth connected successfully" when paring is successful.</p> <p>Note: The device will automatically shut off if there is no pairing action after 10 minutes in Bluetooth mode.</p> <div data-bbox="1085 1179 1320 1197"><p>ANSWERING A PHONE CALL</p></div> <div data-bbox="1085 1201 1713 1328"><p>When the device has been successfully connected with a smart-phone the soundbar will make a ringing tone when the phone gets an incoming call, short press the ▶⏸ button to answer the call or press and hold it to reject the call. Short press the ▶⏸ button again to hang up the phone during or after the phone conversation. Short press this button twice to redial the last phone number the phone dialed. Short press ▶⏸ to cancel the call before it is answered.</p></div> <div data-bbox="1085 1352 1351 1370"><p>PLAYING FROM MICROSOD CARD</p></div> <div data-bbox="1085 1374 1725 1435"><p>The device will automatically switch to MicroSD card playing mode when a card is inserted into the card slot and start to play. Short press ▶⏸ to play/pause the playback, short press ◀◀ for previous track or ▶▶ to skip to the next track.</p></div> <div data-bbox="1085 1459 1323 1477"><p>PLAYING FROM A USB STICK</p></div> <div data-bbox="1085 1481 1688 1543"><p>The device will automatically switch to USB playing mode when a USB stick is inserted into the USB port and start to play. Short press ▶⏸ to play/pause the playback, short press ◀◀ for previous track or ▶▶ to skip to the next track.</p></div>	<div data-bbox="1835 1030 1928 1048"><p>CHARGING</p></div> <div data-bbox="1835 1051 2477 1113"><p>Connect the power adaptor to the MicroUSB charging port to charge the soundbar. The LED indicator will light red to indicate charging is in progrss and will turn off when the battery has been fully charged.</p></div> <div data-bbox="1835 1137 1954 1155"><p>Specifications</p></div> <div data-bbox="1835 1159 2358 1350"><ol style="list-style-type: none">1. Input voltage/current: 5V/1.5A2. Built in battery: Li-ion rechargeable battery3. Battery capacity: 3.7V/2000mAh3. Speakers: 5W*24. Frequency range: 80HZ~20KHZ5. Signal to noise ratio: 80DB6. Source input: MicroSD card/TF card, USB drive, 3.5mm AUX input7. Bluetooth version: V4.28. Bluetooth working distance: 10 meters</div>
--	--	--