

MICROPHONE


RED LIGHT-RECORD

GREEN LIGHT-POWER

RECORD SWITCH

PLAY SWITCH

POWER/SWITCH
VOLUME

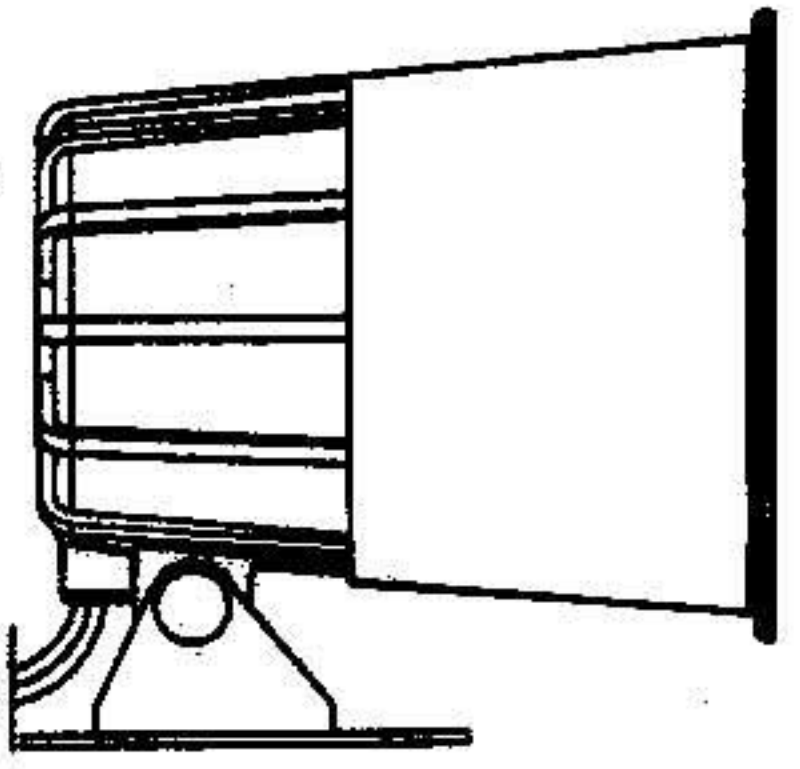

BROWN WIRE CONNECT HORN

WHITE POSITIVE TRIGGER (+12V)
BLUE NEGATIVE TRIGGER (GROUND)
RED (+12V)
BLACK (GROUND)

