


DUAL ZONE RADAR SENSOR

NOTE: Sensor requires fifteen second power up period when alarm is armed. During this period the LED is solid green and the sensor will not trigger.

SWITCH SETTINGS FOR ADJUSTMENT & OPERATION

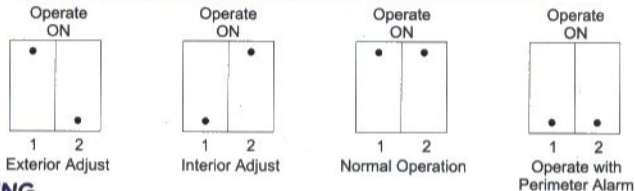

WIRING

- RED : +12 volts or alarm's positive armed output.
- BLACK : Connect to ground.
- BLUE : Connect to instant trigger aux-input of alarm.
- GREEN : Connect to warning trigger aux-input of alarm.
IF DIP Sw. Both "ON" - Exterior output: Pulse.
IF DIP Sw. Both "OFF" - Exterior output: 3 sec.
IF operate with other accessory-

LED INDICATOR

- SOLID GREEN : 15 second power-up
- SOLID YELLOW : A sensor output is connected to 12 V.
- FLASHING YELLOW : Exterior zone is less sensitive than the interior zone.
- FLASHING GREEN : Exterior zone trigger.
- FLASHING RED : Interior zone trigger.

