



FALCON DUAL STAGE SHOCK SENSOR

Mount the sensor in a position where it will be able to detect knocks to the vehicle, ideally this should be as central to the vehicle as possible and attached to a solid part of the vehicle.

Wiring:

Red: +12V

Black: Ground

Green: 1st Stage (Warning) trigger (negative)

Blue: 2nd Stage (Alarm) trigger (negative)

Adjustment:

Turn the black dial on the sensor anti-clockwise to decrease sensitivity and clockwise to increase sensitivity, the green LED will light to indicate activation of the 1st stage and the red LED will light to indicate activation of the 2nd stage.

HELPLINE: 0906 700 10 20

(All calls charged at 50p/min)

Falcon Security Ltd. Unit 9 Tanning Court, Warrington, Cheshire, WA1 2HF, UK
Internet: <http://www.falcon-security.com> Email: support@falcon-security.com