



FALCON SINGLE STAGE SHOCK SENSOR

Mount the sensor in a position where it will be able to detect knocks to the vehicle, ideally this should be as central to the vehicle as possible and attached to a solid part of the vehicle.

Wiring:

Red: +12V

Black: Ground

White: Negative trigger output

Adjustment:

Turn the black dial on the sensor anti-clockwise to decrease sensitivity and clockwise to increase sensitivity, the red LED will light to indicate detection.

HELPLINE: 0906 700 10 20
(All calls charged at 50p/min)

Falcon Security Ltd. Unit 9 Tanning Court, Warrington, Cheshire, WA1 2HF, UK
Internet: <http://www.falcon-security.com> Email: support@falcon-security.com