

PERSONAL CONVENIENCE & SAFETY FEATURES

Ignition Locking

Ignition locking provides the added security of having your doors automatically lock 5 seconds after you turn on your ignition on and unlock when you turn it off, this feature can be enabled or disabled at the time of installation by your installer and requires that the vehicle have central locking fitted which is connected to the alarm system. The doors can be unlocked in the normal manner at any time and relocked by pressing button one.

Panic Alarm Mode

Pressing button 1 for 2 seconds will cause the alarms siren to sound and the hazard lights to flash until button 1 is pressed again to draw attention to either the vehicle or the owner.

Valet Function (Keyless Entry System)

The alarm system can be set to work as a keyless entry system by holding down button two for 2 seconds with the ignition on and the system disarmed. In this mode all the alarm functions are disabled and pressing button one will lock and unlock the doors if they are connected. Valet mode is cancelled by holding down button two again for 2 seconds with the ignition on and the system disarmed.

HOW YOUR VEHICLE IS PROTECTED

The word Zone refers to any door, boot, bonnet or sensor monitored by the alarm system.

1. The flashing dashboard LED is a clear signal to anybody taking even a casual interest in your vehicle that it is protected by a security system.
2. The engine will not start, the alarm system cuts a vital engine circuit when armed (optional immobilisation must be installed).
3. All protected zones are monitored continuously:
 - Door/boot/bonnet trigger
 - Additional detection modules such as Ultrasonic detectors, Microwave detectors, shock sensors etc.

4. The provided window stickers which should have been fitted by the installer to both your side windows, rear window and windscreen warn potential thieves that your car is protected by a quality alarm system.

When the alarm is triggered

On alarm activation the siren will sound and the indicators will flash for 30 seconds before returning to it's fully armed condition. If a zone keeps triggering for over 5 minutes the troubled zone override will disable that zone. An overridden zone will become active again once the fault or the alarm has been reset.

Diagnostic LED Status:

STATUS	LED CONDITION
Disarmed	Off
Armed	Flashing slowly
Triggered	Flashing quickly (cancelled by ignition on)
Valet Mode	On steady

Smart Chirps (Tamper Memory)

If the alarm has been activated during your absence you will hear 6 chirps instead of the usual two when you disarm the system.

Two Car System

If you have the remote control programmed to operate two Falcon 911MK2 alarm systems slide the switch on the side of your remote control forward to operate car A and slide the switch backwards to operate car B.

Anti Hijack

With the ignition on press both buttons for over 2 seconds, the hazard lights will flash twice to confirm anti-hijack mode is operational. 30 seconds later the siren will start to chirp every 2 seconds for 10 times to warn the user. The siren will then start to sound fully, the hazard lights will flash and the engine will be immobilised (if optional immobiliser fitted). Turning the ignition off will silence the alarm and stop the lights flashing but the car will remain immobilised until the both buttons are pressed again.

Programming Additional Remote Controls

Your installer can supply and code additional remote controls. The system can accept up to four remote controls in total.

Changing the battery

During normal usage the remote control battery should last between six and twelve months. You will notice the effective range of the remote control will decrease as the battery weakens. We suggest that you change the battery at least every 12 months even if you do not notice a decrease in range.


To replace the battery follow the below procedure:

- a. Remove the Philips head screw from the back of the remote control.
- b. Separate the two halves of the case.
- c. Remove old battery. Do not remove the circuit board.
- d. Replace with a new battery making sure the positive end of the battery is at the positive battery terminal.
- e. Snap the case back together and replace the Philips screw.

Replacement batteries are available direct from Falcon Security, your installer or most garage forecourts.

Visual Deterrent

As a visible deterrent in addition to the flashing dashboard LED your vehicle should have been fitted with the following warning stickers. A helpline sticker should also have been fitted to your front windscreen.

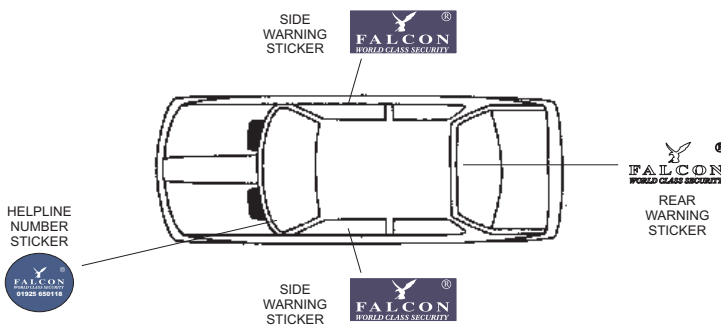

Lifetime Warranty

This product is warranted by Falcon Security to the original purchaser to be free from defects in workmanship and material. Should a product be found defective during the lifetime of the vehicle in which it was originally installed, Falcon Security shall repair or replace the product or any part of the product which Falcon Security agrees is defective without charge providing that the system has been serviced annually by an approved Falcon engineer.

This warranty does not apply to any product damaged by accident, physical or electrical abuse, improper installation, alteration, any use contrary to it's intended function, unauthorised service (i.e.. service by anyone other than Falcon Security or it's authorised personnel), fire, flood, lightning or other acts of God. Falcon Security shall not be responsible for removal and/or reinstallation charges, damage to or theft of contents, or any incidental or consequential damages caused by any failure of this product to function properly.

To benefit from the lifetime warranty you must complete the below form and return within 30 days of installation and in the event of a claim the original purchase receipt and those for annual services **must** be provided.

DON'T FORGET TO KEEP YOUR RECEIPTS

Lifetime Warranty Registration

IMPORTANT

This registration form **MUST** be completed in full and returned with 30 days to Falcon Security, Unit 9 Tamming Court, Warrington, Cheshire, WA1 2HF. UK for you to benefit from the LIFETIME WARRANTY.

Failure to return the card within 30 days from installation will render the Lifetime Warranty null & void and you will only benefit from the statutory guarantee period.


Name _____
Address _____
Vehicle Make _____
Vehicle Model _____
Registration No _____
Date Installed _____
Installed By _____
Postcode _____
Telephone No _____
Who insures your vehicle _____
Company Car Private Car
Renewal Date _____

From time to time Falcon Security may send you information on new products or services, if you do not wish to receive any further information please tick this box.



FUNCTIONS	BUTTON OPERATION	ORIGINAL STATUS	ACTIVITY
ARM	PRESS BUTTON ONE	DISARMED	1 CHIRP/1 LIGHT FLASH/ DOORS LOCK
DISARM	PRESS BUTTON ONE	ARMED	2 CHIRPS/ 2 LIGHT FLASHES/ DOORS UNLOCK
SILENT ARM	PRESS BUTTON TWO	DISARMED	1 LIGHT FLASH/DOORS LOCK
SILENT DISARM	PRESS BUTTON TWO	ARMED	2 LIGHT FLASHES/DOORS UNLOCK
SHOCK SENSOR DELETE (PREDATOR/ELITE ONLY)	HOLD BOTH BUTTONS FOR 2 SECS AFTER ARMING	ARMED	3 LIGHT FLASHES
EMERGENCY PANIC	HOLD DOWN BUTTON 1 FOR 2 SECS	ANYTIME	SIREN/LIGHTS FLASH UNTIL BUTTON 1 PRESSED
VALET MODE	HOLD DOWN BUTTON TWO FOR 2 SECS	DISARMED & IGNITION ON	3 LIGHT FLASHES
EXIT VALET MODE	HOLD DOWN BUTTON TWO FOR 2 SECS	DISARMED & IGNITION ON	3 CHIRPS
ANTI-HIJACK	PRESS BOTH BUTTONS FOR TWO SECONDS	IGNITION ON	2 LIGHT FLASHES

REMOTE CONTROL FUNCTIONS

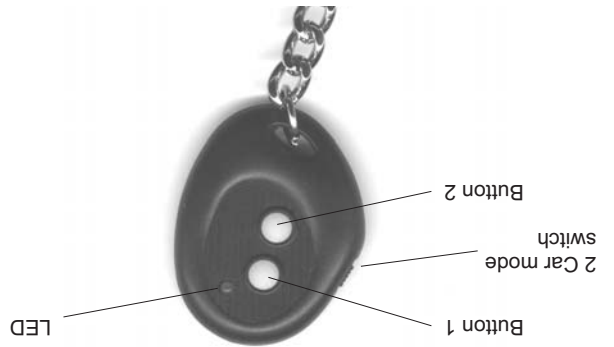

The Falcon 911 is a sophisticated vehicle security system offering a comprehensive range of security and convenience features whilst still offering an excellent ease of use.



FALCON 911 MK2 VEHICLE SECURITY SYSTEM

USER INSTRUCTIONS

SPECIAL OFFER

If you wish to order spare keys and remote control units please specify below.

	NUMBER OF SETS	PRICE PER SET	TOTAL COST
SPARE REMOTE		£24.99	
SPARE IMMOBILISER KEY		£19.99	

Please make cheques payable to Falcon Security

IF CASH IS BEING SENT PLEASE USE RECORDED DELIVERY POST

Returned completed forms to:

Falcon Security, Unit 9 Tanning Court, Warrington Cheshire, WA1 2HF

Silent Arm

To arm the system without the siren chirping press button two, the hazard lights will flash once to confirm the system is arming, if your vehicle also has the central locking connected to the alarm system the doors will also be locked. To arm the system with the siren chirping press button two, the hazard lights will flash three times to confirm the sensors are connected to the alarm system the doors will also be locked. (Predator & Elite only: if an additional shock sensor is connected pressing and holding both buttons immediately after arming will cause the shock sensor to be disabled.)

Auto Rearm

If the alarm system is disarmed with the remote control and a door is not opened within 30 seconds the system will rearm itself.

Passive Arming

With passive arming enabled* you cannot leave your vehicle unprotected, even if you forget to arm your system it will arm itself 30 seconds after you have turned off your ignition and the last door has been shut. *Passive arming can be enabled or disabled at the time of installation by your installer.

DISARMING THE SYSTEM

When you return to your vehicle simply press button one to disarm the alarm system (and unlock the doors if connected).

Silent Disarm

Press button two and the alarm will disarm silently and flash the hazard lights twice as confirmation.

Disarming without the remote control

Should you have lost your remote control or the battery has gone flat then the alarm system can be disabled by following this procedure:

Open door (siren will sound)
 Switch the ignition on
 Press the hidden override switch
 The system is now disarmed

Two Stage Disarm

To stop the alarm whilst triggering press button one and the siren sounding/lights flashing will stop but the alarm will remain armed. Press button one again to disarm the alarm.