

## VMOD31 - FALCON PREDATOR 2 WIRING DIAGRAM



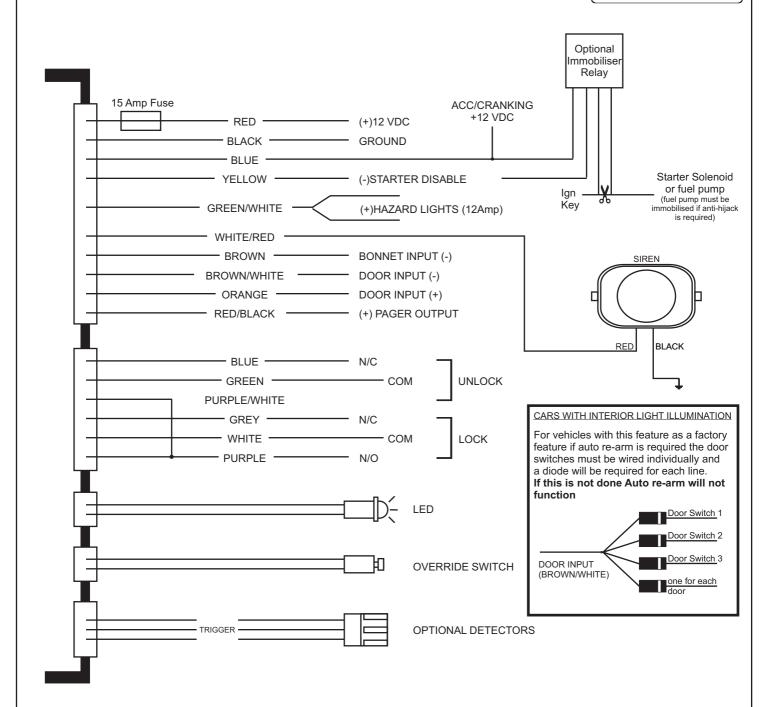


## CENTRAL LOCKING CONNECTION

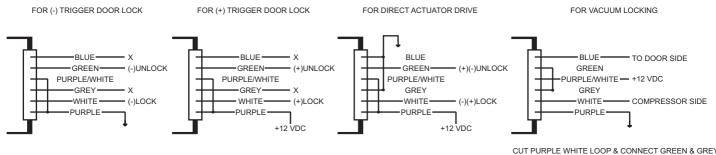

CUT PURPLE WHITE LOOP & CONNECT GREEN & GREY CUT CABLE FROM COMPRESSOR TO DOORS & CONNECT TO BLUE & WHITE AS ABOVE... REMOVE CDL JUMPER TO SET FOR VACCUM LOCKING (SEE OVERLEAF)

## **FUNCTION PROGRAMMING**

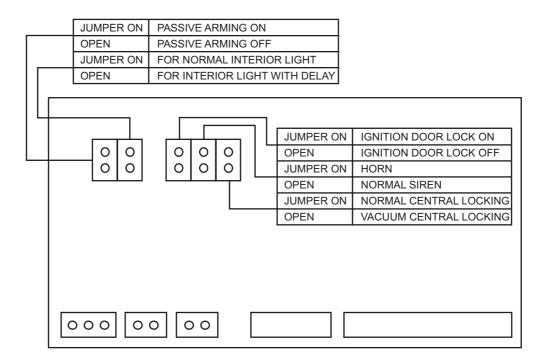

## REMOTE CONTROL PROGRAMMING

The Falcon 911MK2 range support up to 4 remote controls.

The remote control features a slide switch which allows each remote control to operate two separate alarm systems.

To program for car A slide the switch forward and program the transmitter to the first car using the below procedure, to program for car B slide the switch backwards and follow the procedure below for the second car.

- Turn the vehicles ignition on
- Press the hidden override switch for 5 seconds until the siren chirps 5 times and the hazard lights turn on
- •Press any button on the new transmitter to be programmed
- The siren will chirp twice to indicate the system is ready to program a second transmitter
- •Press any button on the new transmitter to be programmed
- The siren will chirp three times to indicate the system is ready to program a third transmitter
- •Follow the same procedure up to a maximum of up to 4 transmitters
- •If within 10 seconds no new transmitter signal is received the system will return to it's normal state automatically
- •Every time a new transmitter is programmed all old codes will be wiped out, so when programming new transmitters the original transmitter must be reprogrammed also.