



**FALCON PREDATOR EASY FIT
Vehicle Security System**

1. Power On:

The system will enter the same mode after powering on as the mode when it was powered off.


2. Remote Control:

A. Code learning:

a. The 2 remote controls have been programmed to the system before leaving the factory

b. To program a new remote control, please follow the steps as below:

- Open the alarm housing to find the switch
- Open the car door with system disarmed
- Within 10 sec. pressing the switch 3 times
- Siren will sound for 2 sec. to confirm entering the programming mode
- Within 10 sec. press the 1st remote button #1 once
- Siren sounds for 1 sec. and parking lights flash once to confirm the 1st remote has been programmed to the system and all the previous remotes have been erased from the memory.
- Within 10 sec. press the 2nd remote button #1 once

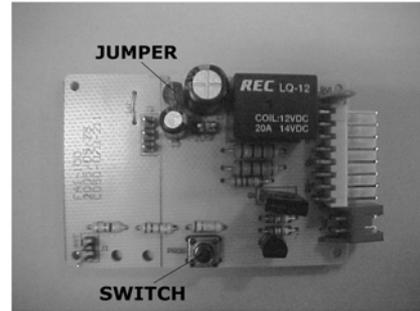

Siren sounds for 1 sec. and parking lights flash once to confirm the 2nd RC has been programmed to the system

* The system will leave the programming mode when the door is closed or no action is taken within 10 sec.

* The system will leave the programming mode automatically after programming the 2 remotes to the system

B. Remote control operation

Button	Armed	Disarmed
press button #1 once	arm	arm
press button #2 once	disarm	disarm
press button #1 3 sec.	panic	panic
Press button #1+2 once	silent disarm	silent arm



3. Jumper:

Remove the jumper = 4 sec. lock/unlock pulse length

Insert the jumper = 1 sec. lock/unlock pulse length (factory default)

4. Arm Mode:

Press button #1 once with the system disarmed, siren will chirp once, hazard lights will flash once and the LED flashes slowly to confirm the system is armed.

5. Interior Light Delay/Door open warning:

The siren will chirp 3 times 20 sec. after arming the system if a door is open. In this case, the door will not be protected until it is closed properly.

6. Silent Arm/Disarm:

A. Pressing buttons #1+2 together will arm or disarm the system without the chip confirmation but the siren will still chirp 3 times after 20 sec. if a door is open.

B. When silent disarming, the siren would still chirp 4 times if the system has been triggered

7. Disarm Mode:

A. Pressing button #2 once with the system armed will disarm the system and the siren will chirp twice and the hazard lights flash twice to confirm disarming.

B. If the system was triggered while the user was away from the vehicle, pressing button #2 once with the system armed will disarm the system and the siren will chirp 4 times, the hazard lights will flash twice. The trigger memory will be erased after opening the door.

8. Override:

Open the case of main unit and pressing the switch for 2 seconds will override the system

9. System Triggers:

A. Door open and then closed

The siren will sound and hazard lights flash for one cycle then the system remains in arm mode

B. Door open and then not closed

The siren will sound and hazard lights flash for 3 cycles then the system remains in arm mode but the door will not be triggered unless closed properly

C. Bonnet/Boot opened and then closed

The siren will sound and hazard lights flash for one cycle then the system remains in arm mode

D. Bonnet/Boot opened and then not closed

The siren will sound and hazard lights flash for 3 cycles then the system remains in arm mode but the door will not be triggered unless closed properly

E. Clear the trigger


a. Pressing button #1 once when the system is triggered and alarming or under panic mode will clear the alarm but the system remains in arm mode. The siren will chirp once and the hazard lights will flash once to confirm.

b. Pressing button #2 once when the system is triggered and alarming or under panic mode will clear the alarm but the system will be disarmed. The siren will chirp 4 times and the hazard lights will flash twice to confirm.

0. Panic Mode:

Press button #1 for 3 secs with the system armed or disarmed, the siren will sound for 30 secs and hazard lights will flash for 30 secs. The system remains in arm mode

Wiring Diagram

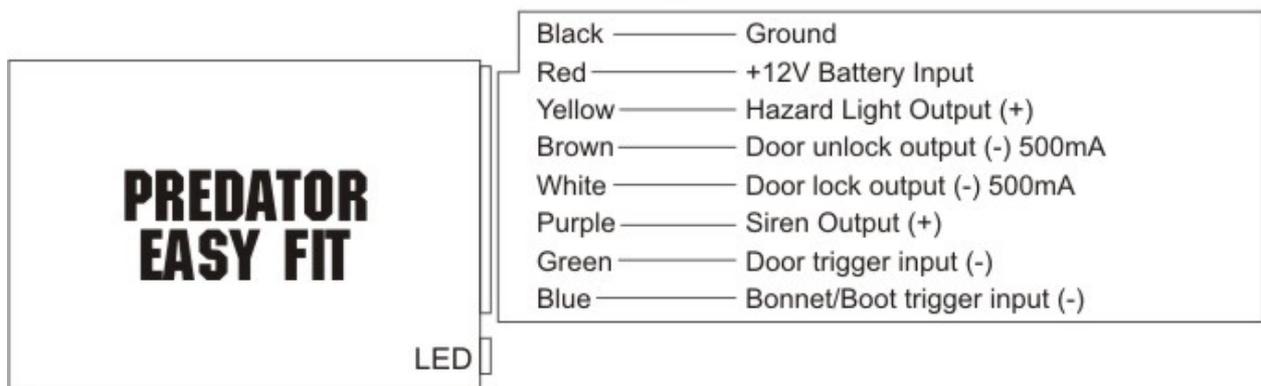

HELPLINE: 0906 700 10 20

(All calls charged at 50p/min)