



***FALCON PREDATOR  
CAN-BUS ALARM***

**Advanced Alarm System for Vehicles with CAN-Bus**

User Manual

NATIONWIDE INSTALLATION SERVICE  
0800 622 474

**HELPLINE: 0906 700 10 20  
(All calls charged at 50p/min)**

Internet: <http://www.falcon-security.com>  
Email: [support@falcon-security.com](mailto:support@falcon-security.com)

A. System Operation.....	3
01. System arm .....	3
02. System disarm .....	4
03. Status LED indications.....	5
04. Temporary sensor bypass.....	5
05. Valet mode.....	6
06. System trigger and alarm.....	6
07. Trigger and alarm clear .....	7
08. Remote boot open .....	8
B. System Programming.....	9
01. Setting the optional features .....	9
02. Optional feature table .....	10
C. Explanation of Optional Features.....	11

## A. System Operation

### 01. System arm

---

The system can be armed as follows:

1. Press the lock button of factory remote
2. Passive arming
3. Auto re-arm

#### 1. Press the lock button of factory remote

The operation is as follows:

1. With ignition off
  2. The N.O immobiliser will be on if connected
  3. AED will function within 20 or 30 sec. depending on the setting of option #3
  4. Close all the doors, boot and bonnet properly
  5. Press the lock button of factory remote to lock the doors
  6. The lights will flash and siren/horn chirp depending on the setting of option #1
  7. The N.C immobiliser will be on if connected
  8. The windows will roll-up depending on the car itself and the setting of option #9
  9. The status LED flashes slowly to confirm the system is armed
- \* The doors will be protected after 5/25/40/60 sec. of system arming depending on the setting of option #4
  - \* if any door is not closed properly the siren/horn will chirp an additional 3 times to warn within 5/25/40/60 sec. of system arming and the doors will not be protected until they are closed properly
  - \* If the boot, bonnet is not closed properly then the siren/horn will chirp additional 3 times when arming the system and the boot or bonnet will not be protected until closed properly

#### 2. Passive arming

If the passive arming is programmed to Mode-I or Mode-II, the system will be armed in 30/180 sec. depending on the setting of option #6. The operations are as follows:

1. With ignition off
2. The N.O immobiliser will be on if connected

3. AED will function in 20 or 30 sec. depending on the setting of option #3
  4. Close all the doors, boot and bonnet properly
  5. 30/180 sec. later the system will be armed
  6. The lights will flash and siren/horn will chirp depending on the setting of option #1
  7. The N.C immobiliser will be on if connected
  8. The windows will roll-up depending on the setting of option features #9
  9. The status LED flashes slowly to confirm the system is armed
- \* Passive arming won't function if the doors, boot or bonnet are not closed properly
  - \* Opening a door, boot or bonnet during the 30/180 sec. countdown will interrupt the process of passive arming until it is closed

### 3. Auto rearm

If the auto rearm is enabled (feature #7) the system will be rearmed 30 sec. after disarming unless any of the doors, boot or bonnet are opened

### 02. System disarm

---

The system can be disarmed as follows:

1. By pressing the unlock button of factory remote
2. Override the system

#### 1. By pressing the unlock button of factory remote

The operation is as follows:

1. With system armed
  2. Press the unlock button of factory remote
  3. The lights will flash and siren/horn chirp depending on the setting of option #1
  4. The immobiliser will be on or off depending on the wiring and the setting of AED (option feature #3)
  5. The status LED will be off to confirm the system is disarmed
- \* If the system was triggered while away from the vehicle, the siren will chirp an additional 4 times, the lights will flash an additional 2 times and the LED will flash to indicate the

triggered zone as follows:

Triggered Zone	Led Indication
2 <sup>nd</sup> sensor trigger	LED flashes one
Boot/Bonnet trigger	LED flashes 3 times
Door trigger	LED flashes 4 times
Ignition trigger	LED flashes 5 times

\* The trigger memory will be erased once the ignition is turned on

## 2. Override the system

If the factory remote becomes lost or malfunctions, the system still can be disarmed by override as follows:

1. With the system alarmed
  2. Turn the ignition on
  3. After 2 sec., the LED starts to flash 10 times slowly
  4. Press the valet switch once after the LED flashes a number of times equal to the override code\* (Default code: 1)
  5. The system will be overridden and will enter disarm mode
- \* Wait for 3 minutes and then operate again after 3 times of incorrect operation

## 03. Status LED indications

The status LED will indicate the system status as follows:

Led Indication	System Status
Slow Flash	Armed
Fast flash	Auto rearm or Passive arming
Solid on	Valet mode
No Light	Disarmed

## 04. Temporary sensor bypass

If necessary, the sensor can be bypassed temporarily as follows:

1. Turn the ignition off and then open the door
  2. Press the valet switch until the lights flash once to confirm the 1<sup>st</sup> stage of sensors is bypassed
  3. Press the valet switch until the lights flash twice to confirm the sensors are bypassed entirely
- \* The function will deactivate after turning the ignition on

## 05. Valet mode

---

Valet mode is a convenient feature to use when handing the remote to third person for valet parking or vehicle service and the operation is as follows:

1. Turn the ignition on with the system disarmed
2. Within 10 sec. press the valet switch for 5 sec. and the LED will turn on solid to confirm the system is in valet mode

To quit valet mode, follow the 2 methods as follows:

1. Operate the steps to enter the valet mode again, the LED will turn off to confirm
2. The system will quit the valet mode automatically after 30 minutes of turning the ignition on

\* In valet mode the system can't enter the programming mode and the AED won't be activated

\* Deactivate the AED before the system enters valet mode otherwise the engine won't be able to start in valet mode

## 06. System trigger and alarm

---

### 1. 1<sup>ST</sup> stage of sensor trigger

The siren will chirp 3 times and lights flash once when the 1<sup>st</sup> stage of the sensor is triggered

### 2. 2<sup>nd</sup> stage of sensor trigger

1. The siren will sound for 1 cycle
2. The lights will flash for 1 cycle
3. The LED will flash
4. The 2<sup>nd</sup> stage of the sensor will be bypassed after 3 sequential activations until the trigger is cleared

### 3. Boot or bonnet trigger (opened then closed)

1. The siren will sound for 1 cycle
2. The lights will flash for 1 cycle
3. The LED will flash

### 4. Boot or bonnet trigger (opened then not closed)

1. The siren will sound for 3 cycles
2. The lights will flash for 3 cycles
3. The LED will flash

4. After the 3 cycles, the boot/bonnet switch will be bypassed until the boot or bonnet is closed properly

5. Door trigger (opened and then closed)

1. The siren will sound for 1 cycle
2. The lights will flash for 1 cycle
3. The LED will flash

6. Door trigger (opened and not closed)

1. The siren will sound for 3 cycles
2. The lights will flash for 3 cycles
3. The LED will flash
4. After the 3 cycles, the door trigger will be bypassed until the doors are all closed properly

7. Ignition trigger (on and then off)

1. The siren will sound for 1 cycle
2. The lights will flash for 1 cycle
3. The LED will flash

8. Ignition trigger (on and not off)

1. The siren will sound for 3 cycles
2. The lights will flash for 3 cycles
3. The LED will flash
4. After the 3 cycles, the ignition trigger will be bypassed until the ignition is turned off

\* 1 cycle = 30 or 60 sec. depending on the setting of option #9

07. Trigger and alarm clear

To clear the system during alarming do one of the following:

1. Press the lock button
2. Press the unlock button
3. Override

1. Press the lock button of factory remote:

When the system is triggered and alarmed, press the lock button once, the siren and lights will deactivate and the system remains armed

## 2. Press the unlock button of factory remote:

When the system is triggered and alarmed, press the unlock button once, the siren and lights will deactivate. Then the lights will flash additional 3 times, siren/horn will chirp additional 4 times and LED will flash to indicate the last triggered zone and the system enters disarm mode

\* The trigger memory will be erased after the ignition is turned on

## 3. Override the system

Overriding the system will deactivate the siren and lights and the system will enter disarm mode

## 08. Remote boot open

With system armed, press the factory remote to open the boot (where applicable), the system won't be triggered and alarmed but will remain in arm mode. The boot will be protected after it is closed again

## B. System Programming

### 01. Setting the optional features

---

Follow the steps below to program the optional features:

1. With the system disarmed and ignition off
2. Open the door and turn the ignition on
3. Press the valet switch 3 times within 10 sec.
4. The siren will sound for 2 sec. to confirm the system is in programming mode

\* Reset all optional features back to the factory default:  
Within 10 sec. press and hold the valet switch until the siren sounds for 2 sec.

#### **Programming example: To set option #5 to Mode-I**

1. Press the valet switch 5 times within 10 sec. and the siren will chirp once after each press of the valet switch
  2. After 2 sec., the siren will chirp 5 times to confirm that feature #5 is selected for setting
  3. Within 10 sec., press the valet switch until the siren chirp 2 times to confirm the feature has changed to Mode-I. (the siren will respond with a different number of chirp for each press of the valet switch)
  4. After 2 sec., the siren will sound for 1 sec. to confirm the optional feature is programmed
  5. Within 10 sec. press the valet switch to select the next feature for programming. If the valet switch is not pressed again within 10 sec. the system will leave the programming mode and the siren will sound for 2 sec. to confirm
- \* The system will leave the programming mode as follows:
1. Turn off the ignition or close the door during the programming mode
  2. If the valet switch is not pressed within 10 sec

02. Optional feature table

Item	Features	✓	1 chirp	✓	2 chirp	✓	3 chirp	✓	4 chirp	✓	5 chirp
01	Arm & Disarm Confirmation		Disable		Flash		Horn		Siren*		Siren+Flash
02	Installer only option		-		-		-				
03	Auto Engine Disable(AED)		Disable*		Mode-I		Mode-II				
04	Installer only option		-		-		-		-		
05	Passive Arming		Disable*		Mode-I		Mode-II				
06	Passive Arming Timer		30sec.		180sec.*						
07	Auto Rearm		Disable*		Enable						
08	Alarm Duration		30sec.*		60sec.						
09	Installer only option		-		-		-		-		-
10	Override Code		1 Flash*								2 ~ 10 Flashes

\*Factory default = asterisk

### C. Explanation of Optional Features

#### Option 1. Arm & disarm confirmation

---

This feature can make the indicator lights flash and/or car horn/siren chirp when pressing the factory remote to arm or disarm the system as follows:

##### 2 chirp = Flash

Setting this feature to Flash will make the lights flashing once when arming and twice when disarming

##### 3 chirp = Horn

This feature will make the car horn honking once when arming and twice when disarming

##### 4 chirp = Siren

This feature will make the siren chirp once when arming and twice when disarming

##### 4 chirp = Siren+Flash

This feature will have the siren chirp once and lights flash once when arming and twice when disarming

#### Option 3. Auto engine disable (AED)

---

This feature offers the car more security by disabling the starter operation is as follows:

##### 2 chirp = Mode-I

1. Turn the ignition off
2. The status LED starts to flash
3. 20 sec. later the AED will be active and the LED turns off to confirm
4. Turning the ignition on or pressing the unlock button of the factory remote within 20 sec. will cancel the countdown and the LED will be off to confirm
5. To start the countdown again, simply turn the ignition on then off and the LED will flash to confirm
6. Press the remote to arm the system during the 20 sec. countdown to activate the AED immediately

\*To deactivate the AED:

When disarming the system, the AED will remain on and the only way to deactivate the AED is to operate the override

### 3 chirp = Mode-II

1. Turn the ignition off
2. The status LED starts to flash
3. 30 sec. later the AED will be on and LED turns off to confirm
4. Turning the ignition on or pressing the unlock button of factory remote within the 30 sec. will cancel the countdown and the LED will be off to confirm
5. To start the countdown again simply turn the ignition on then off and the LED will flash to confirm
6. Press the remote to arm the system during the 30 sec. countdown to activate the AED immediately

\*To deactivate the AED:

There are 2 way to deactivate the AED in mode-II as follows:

1. Press the unlock button to disarm the system, the AED will be deactivated at the same time
2. By override

\* When AED is activated, the system can't enter the following modes:

- Code learning
- Programming of the optional features
- Hazard lights learning
- Valet mode

\* The differences between Mode-I and Mode-II:

- In Mode-I, the system will enter AED mode 20 sec. after turning the ignition off
- In Mode-II, the system will entry AED mode 30 sec. after turning the ignition off
- In Mode-I, the AED won't be deactivated after disarming the system by pressing the unlock button of factory remote and can only be deactivated by using the override
- In Mode-II, the AED will be deactivated when disarming the system by pressing the unlock button of the factory remote. Operating the override will also deactivate the AED

#### Option 5. Passive arming

---

When enabled, the system will arm as follows:

##### 2 chirp = Mode-I

The operation is as follows:

1. Turn the ignition off
2. Close the doors, boot and bonnet properly
3. LED starts to flash fast and the system will arm in 30 or 180 sec.
4. The Auxiliary Output will activate as per the setting of feature #9

\* Opening the door, boot or bonnet will interrupt the countdown until closed again

##### 3 chirp = Mode-II

The operation of Mode-II is exactly same as Mode-I but the Auxiliary Output won't activate

#### Option 6. Passive arming timer

---

##### 1 chirp = 30 sec.

The system will enter arm mode 30 sec. after closing the last opened door, boot or bonnet with ignition off

##### 2 chirp = 180 sec.

The system will enter arm mode 180 sec. after closing the last opened door, boot or bonnet with ignition off

#### Option 7. Auto rearm

---

##### 2 chirp = Enable

When enabled, the system will arm itself again 30 sec. after disarming if none of the doors, boot or bonnet are opened

#### Option 8. Alarm duration

---

##### 1 chirp = 30 sec.

The siren/horn will sound for 30 sec. each cycle when the system is triggered

##### 2 chirp = 60 sec.

The siren/ horn will sound for 60 sec. each cycle when the system is triggered

#### Option 10. Override code

---

Follow the steps below to program the override code:

(For example: Programming 4 as the new override code)

1. Enter the programming mode
  2. Within 10 sec. press the valet switch 10 times to select feature #10, the siren will chirp once for each press of the valet switch
  3. After 2 sec., the siren will chirp 10 times to confirm the feature #10 is selected for programming
  4. Within 2 sec., press the valet switch once, the siren will chirp 2 times to indicate the current code is 2 (if the default code is 1)
  5. Within 2 sec. press the valet switch once, the siren will chirp 3 times to indicate the current code is 3
  6. Within 2 sec. press the valet switch once. the siren will chirp 4 times to indicate the current code is 4
  7. Then 2 sec. later the siren will sound for 1 sec. to confirm the code has been changed to 4
  8. Within 10 sec. press the valet switch to select next feature for programming or the system will leave the programming mode and the siren will sound for 2 sec. to confirm
- \* The system will leave the programming mode as follows:
1. Turn the ignition off or close the door during programming
  2. If the valet switch is not pressed within 2 sec or 10 sec.