



FALCON PREDATOR MKIII WIRING DIAGRAM

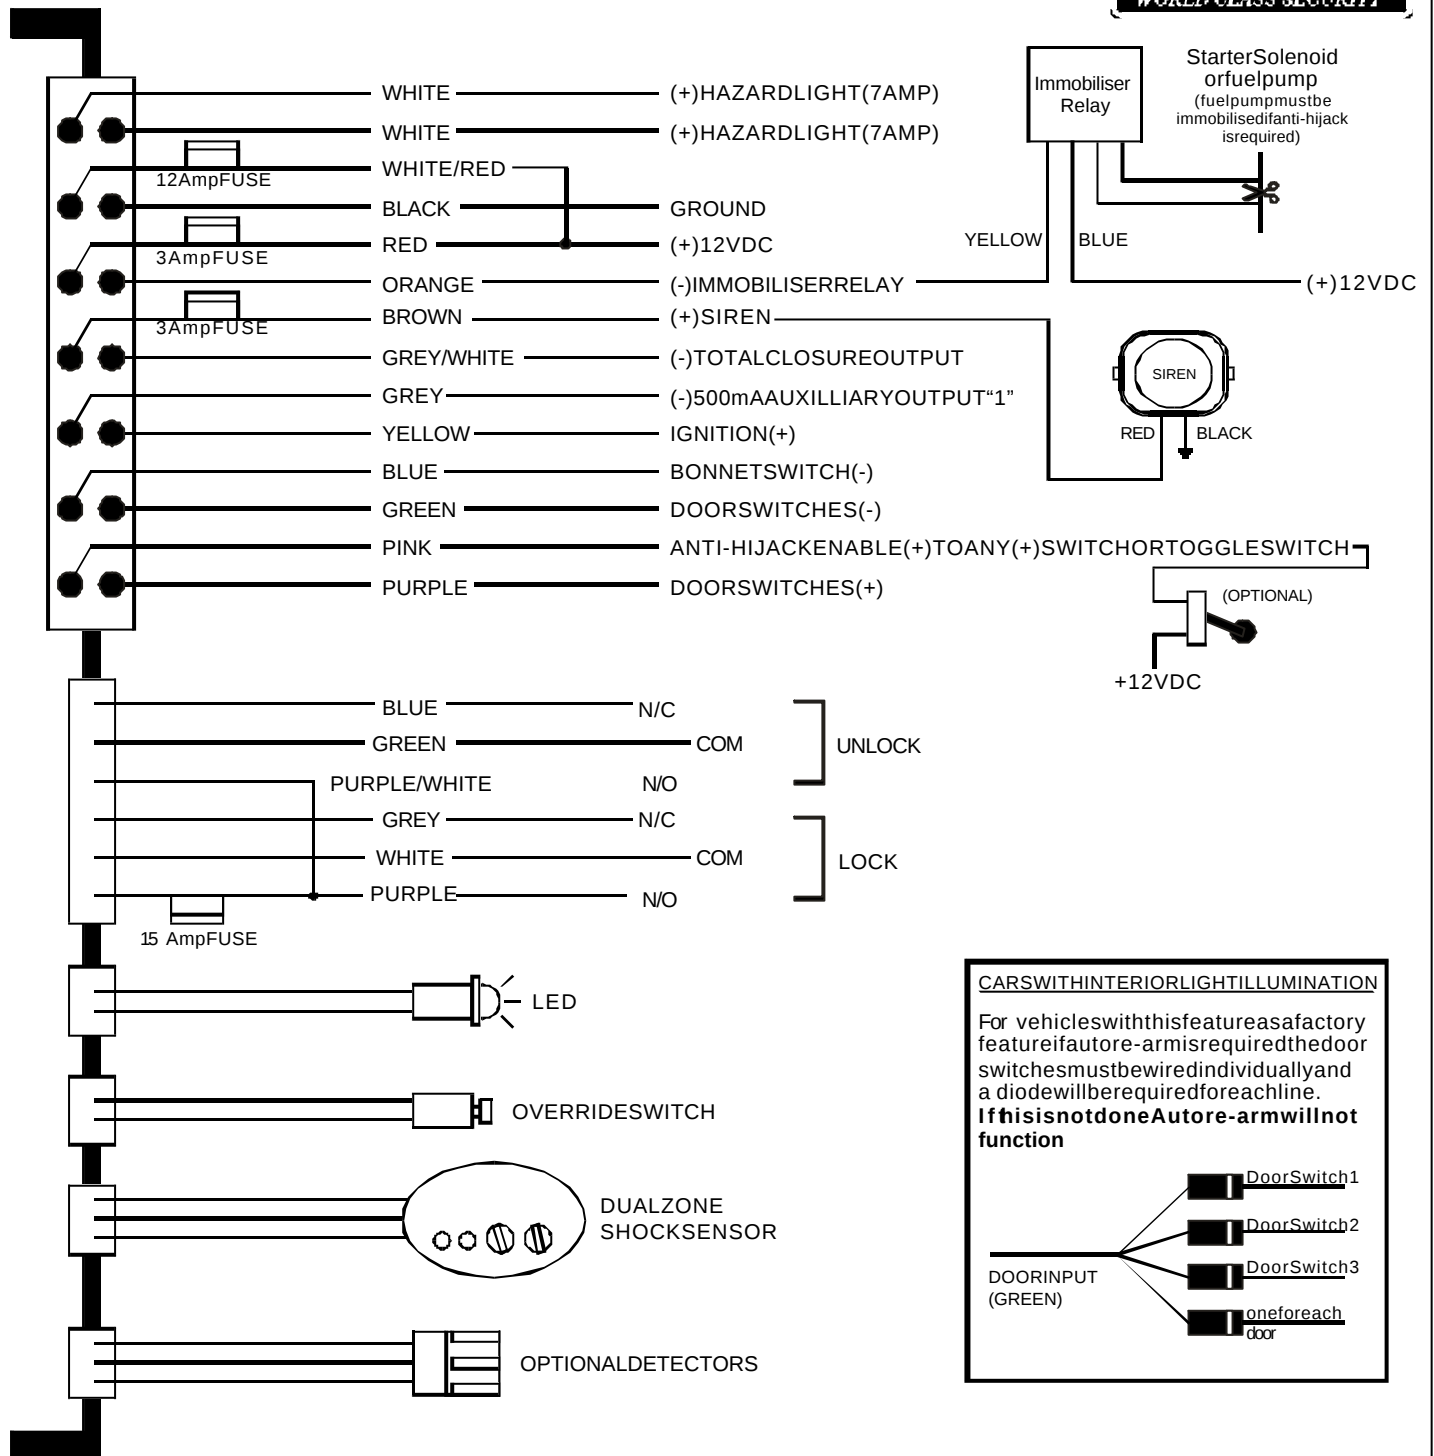


CARS WITH INTERIOR LIGHT ILLUMINATION


For vehicles with this feature as a factory feature if a factory arm is required the door switches must be wired individually and a diode will be required for each line.
If this is not done Auto-re-arm will not function

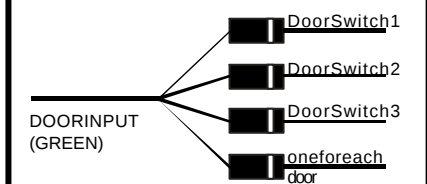

CENTRAL LOCKING CONNECTION

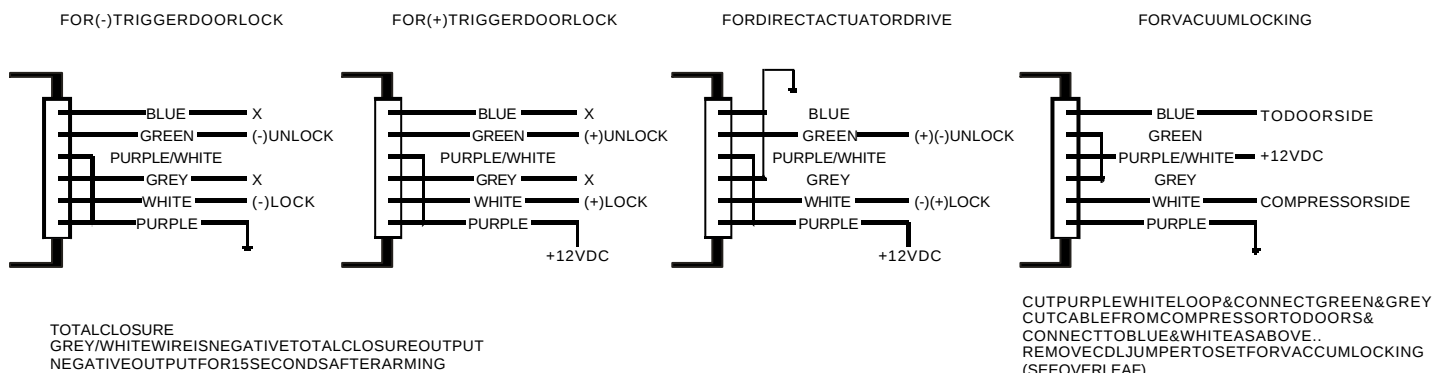

FUNCTION PROGRAMMING

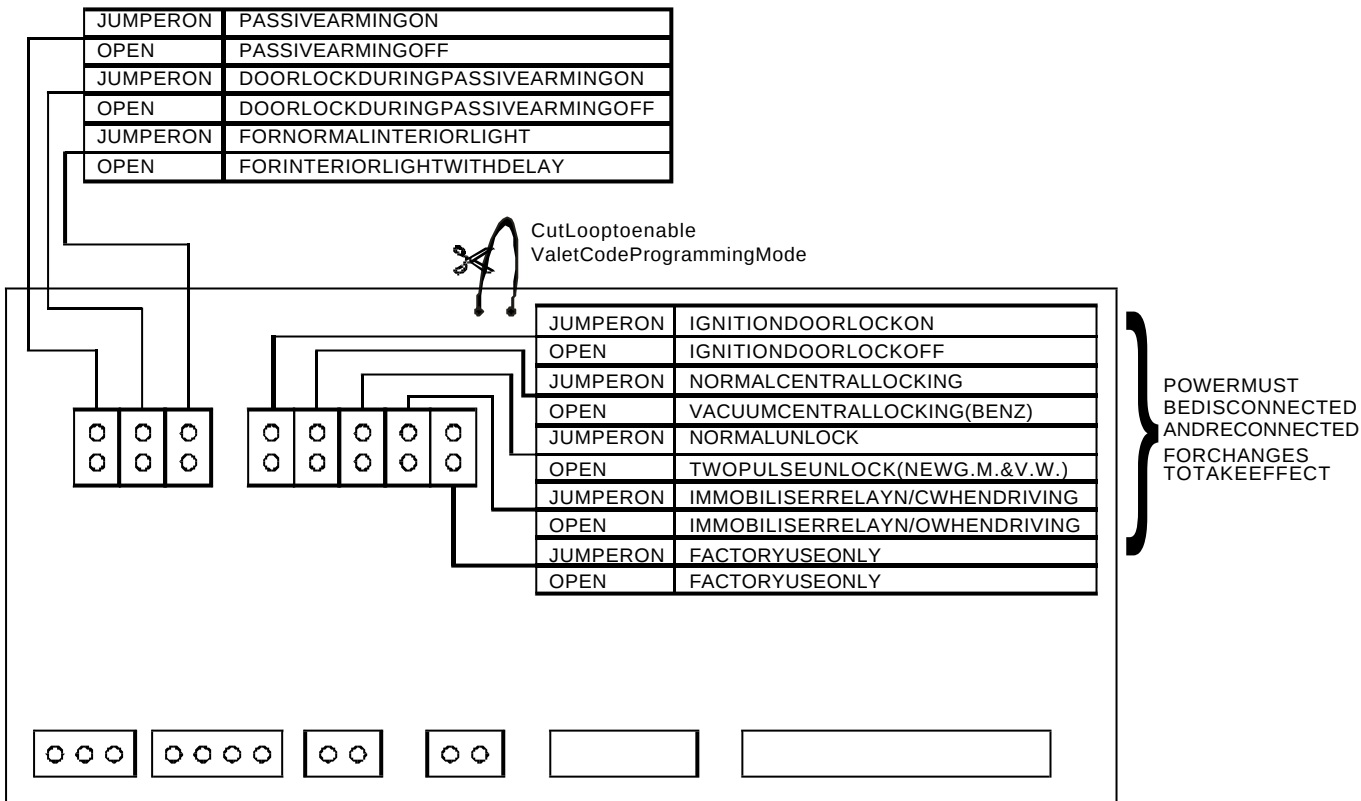

REMOTE CONTROL PROGRAMMING

The Falcon Predator supports up to 4 remote controls.

- Turn the vehicle's ignition on
- Press the hidden overrides switch for 5 seconds until the siren chirps 5 times and the hazard lights turn on
- Press any button on the new transmitter to be programmed
- The siren will chirp twice to indicate the system is ready to program a second transmitter
- Press any button on the new transmitter to be programmed
- The siren will chirp three times to indicate the system is ready to program a third transmitter
- Follow the same procedure up to a maximum of up to 4 transmitters
- If within 10 seconds no new transmitter signal is received, the system will return to its normal state automatically
- Every time a new transmitter is programmed, all old codes will be wiped out, so when programming new transmitters, the original transmitter must be reprogrammed also.