



**FALCON PREDATOR TX8**  
Advanced 8 Channel Keyless Entry System

**4-BUTTON REMOTE CONTROL**



**FUNCTIONS**

**REMOTE CONTROL PROGRAMMING**

When the system is disarmed, switch the ignition on, press the valet switch for 3 seconds. The hazard lights will flash once to indicate the system is in remote control learning mode. Within 5 seconds, press any button in order to program the remote control. The hazard lights will flash once for confirmation. Up to 4 remote controls can be programmed into the system. Switch the ignition off or wait for 5 seconds to exit the programming mode.

**Key Function Table / 4-Button Transmitter**

Button	Function	Condition
Press Button #1	Door Lock & immobiliser output on	Immobiliser output off
Press Button #2	Door Unlock & immobiliser output off	Immobiliser output on
Press Button #3	1 <sup>st</sup> Channel Output	Anytime
Press Button #4	2 <sup>nd</sup> Channel Output	Anytime
Press Button #1 + #3	3 <sup>rd</sup> Channel Output	Anytime
Press Button #2 + #4	4 <sup>th</sup> Channel Output	Anytime
Press Button #1 + #2	5 <sup>th</sup> Channel Output	Anytime
Press Button #3 + #4	6 <sup>th</sup> Channel Output	Anytime

**Remote Door Lock**

Press button #1, the hazard lights will flash once. The immobiliser output will be enabled and the lock output will pulse for 1 second or keep sending a pulse until button #1 is released. The LED will begin flashing slowly.

**Door Unlock**

Press button #2 once, the hazard lights will flash twice. The immobiliser output will be disabled and the unlock output will pulse for 1 second or keep sending a pulse until button #2 is released. The LED will be off.

**ACC mode**

When the system is disarmed, switch the ignition on:

- a. Press button #1, the lock output will pulse for 1 second or until button #1 is released.
- b. Press button #2, the unlock output will pulse for 1 second or until button #2 is released.

**Override Mode**

Unlock the doors manually, switch the ignition on and press the valet switch for 3 seconds, the immobiliser output will turn off. The hazard lights will flash twice and the unlock output will pulse for 1 second.

### **Channel 1 Output**

At any time, press button #3 to output channel 1 continuously until button #3 is released.

### **Channel 2 Output**

At any time, press button #4 to output channel 1 continuously until button #4 is released.

### **Channel 3 Output**

At any time, press button #1 + #3 to output channel 1 continuously until button #1 + #3 is released.

### **Channel 4 Output**

At any time, press button #2 + #4 to output channel 1 continuously until button #2 + #4 is released.

### **Channel 5 Output**

At any time, press button #1 + #2 to output channel 1 continuously until button #1 + #2 is released.

### **Channel 6 Output**

At any time, press button #3 + #4 to output channel 1 continuously until button #3 + #4 is released.

## **WIRING DIAGRAM**

### **8 Channel Keyless Entry System Remote Module**

