


THE SATMAT BY QuickSAT

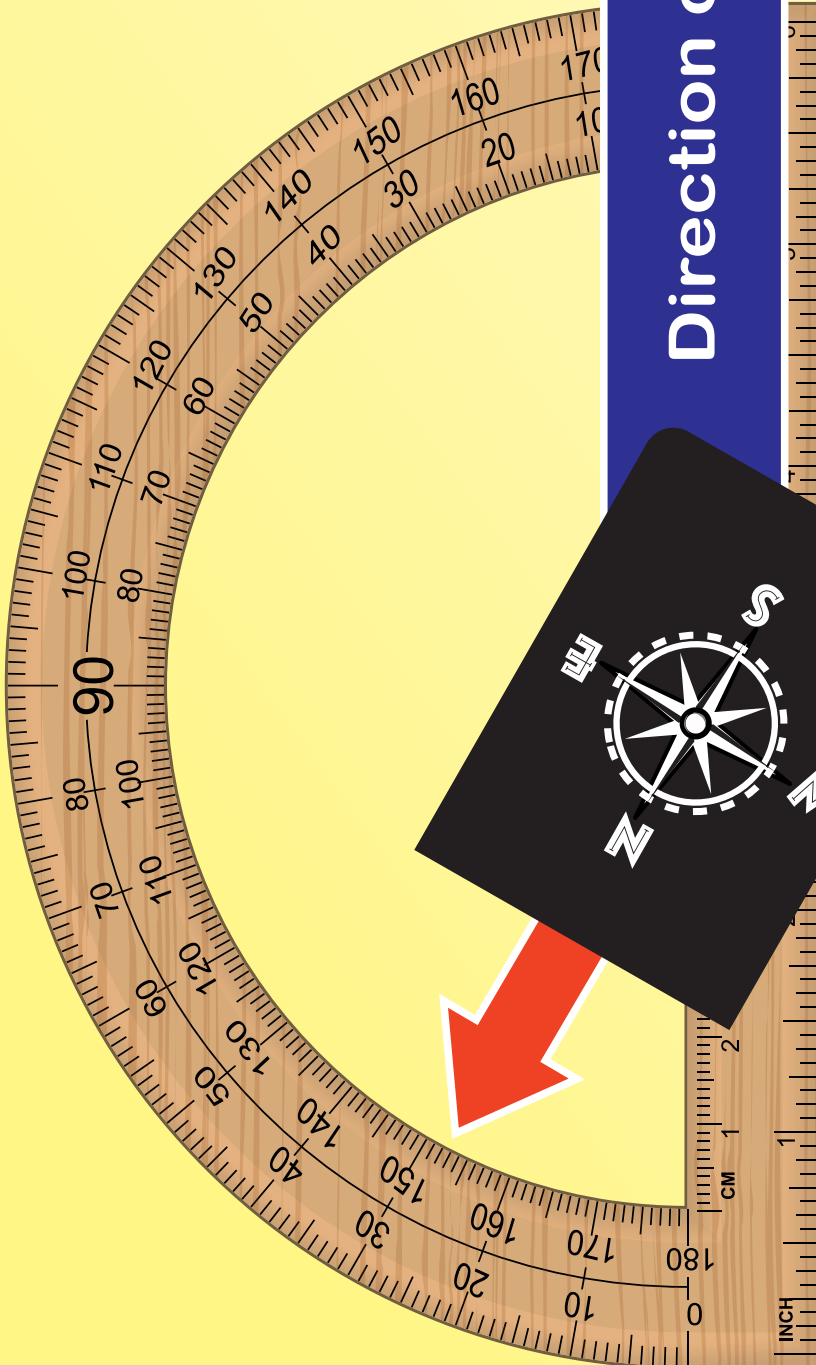

INSTRUCTIONS

1

LAY THIS GUIDE ON THE GROUND AND PLACE COMPASS ON THE BLACK BOX, THEN ROTATE THE SAT-MAT TO ENSURE THE COMPASS NORTH ARROW ALIGNS WITH RED ARROW ON THIS SAT-MAT

2

POSITION YOUR TRIPOD AS PHOTO BELOW

